




YAZOO

Parts Manual for

YHRLD212 SERIES & YHRLD211 SERIES COMMERCIAL FRONT CUT RIDER

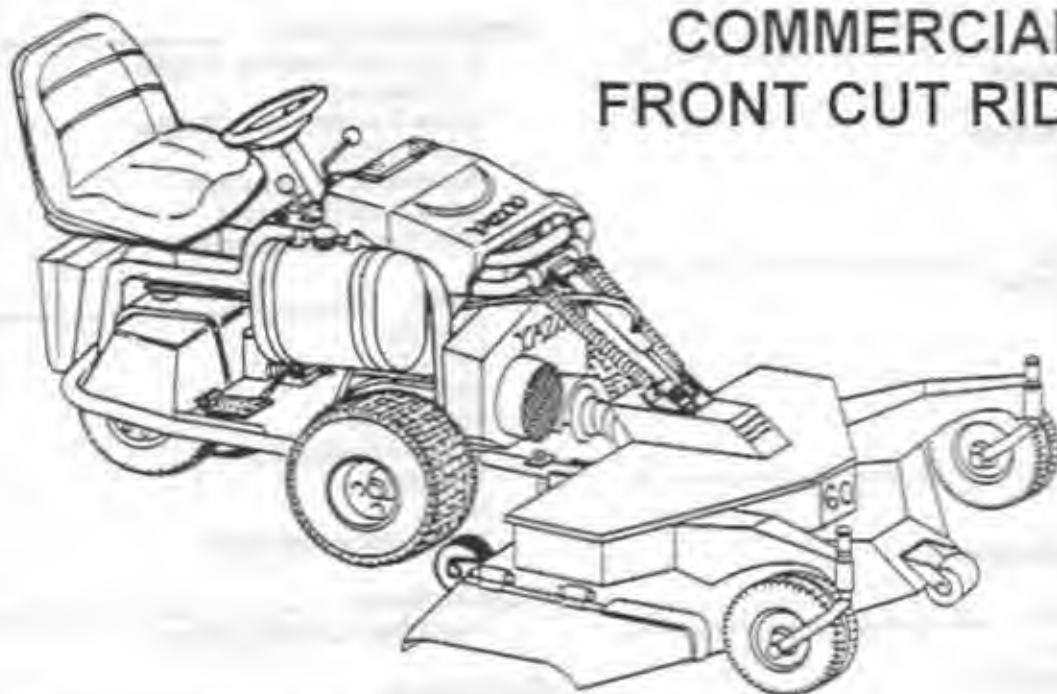


**Professional Quality Lawn Care Equipment
since 1945**

Yazoo Manufacturing Company's policy is to improve its products whenever it is possible and practical to do so. In a effort to keep pace with changes in technology, Yazoo reserves the right to make changes or improvements at any time without incurring any obligation to make such changes on products previously manufactured.

CONTENTS


Tractor Hood	3	Operator Seat	1
Hood		Tractor Seat & Mounting Components	
Mounting Brackets		Seat Switch	
Latches		Rider Weight	
		Battery Mount Bracket	
Guards & Shields	4	Transmission Control Pedal	1
Air Deflector Shields		Neutral Switch Bracket	
Belt Guard		Switch	
PTO Belt Guide		Switch Actuator	
		By-Pass Valve Arm	
Dash Panel	5	Transmission Neutral Cable	
Indicator Lights		Tension Spring	
Ammeter		Hydro Pedal	
Hour Meter		Linkage	
Inclinometer		Transmission Control Arm	
Throttle Control			
Key Switch		Traction Drive System	1
Engine Components	6	Brake Pedal Assembly & Latch	
Chaff Guard (Screen)		C/S Lever Spring	
Engine		Hydro Transmission & Oil Filter	
Motor Mount Brackets		Axe Assembly	
Over Flow Tank		Transmission Pulley & Fan	
Flywheel Cover		Brake Drum & Linkages	
		Drive Tire & Rim Assembly	
Engine Components	7	Belt Drives	18
Temperature Sender		Linkages	
Motor Mounts		Bearings	
Pulleys		Springs	
Fuel Solenoid		Idler Pulleys	
Air Cleaner		Idler Arm Assemblies	
Steering Components	8	Brake Band	
Steering Wheel		Belts	
Steering Gears		Tractor Frame Weldment	
Steering Shaft & Bearings		Hydraulic System	20
Steering Components	9	Mower Deck Lift Components	
Steering Linkage		Brake System	21
Wheel & Rim Assembly		Wheel Brake Components	
Fuel System	10	Hydrostatic Differential	22
Fuel Lines		Tractor Axle Components	
Hose Clamps		Transmission	24
Fuel Tank & Mounting Components		Sundstrand Transmission Components	
Fuel System	11	Electrical System	25
Fuel Lines		Wiring Harness & Components	
Fuel Filters & Filter Element		Module	
Fuel Valve		Glow Plug Solenoid	
Exhaust System	12	Fuses	
Muffler		Oil Drain System	26
Rubber Mounts		Drain Valves	
Blade Control Lever	13	Hoses & Clamp	
Switch & Mounting Bracket		Decals	27
Blade Engagement Lever & Knob		Safety Messages	
Linkage			

TRACTOR HOOD

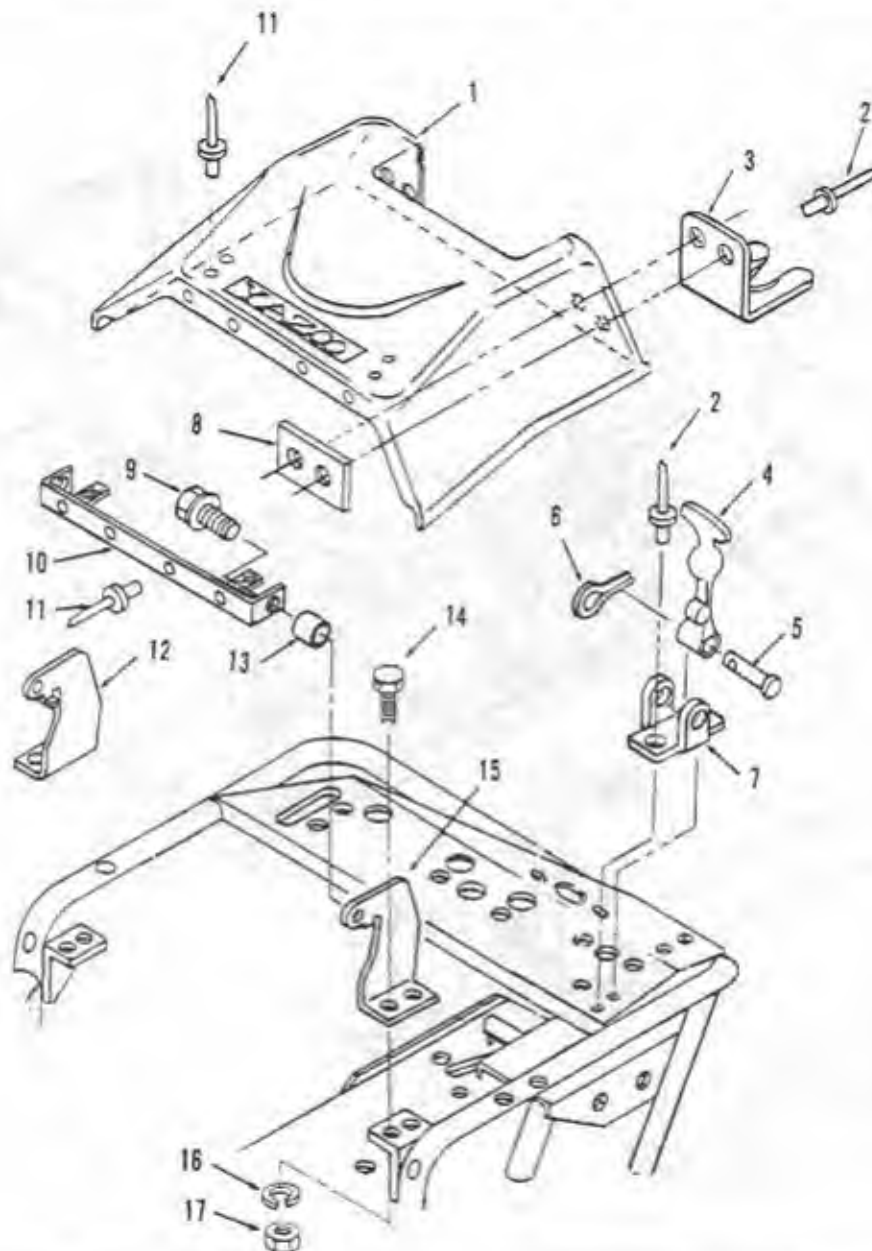


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0804-094	Hood Asm.	9	0209-081	HWH, .25Cx.75 TF (2)
2	1807-007	Rivet, Pop .188 (8)	10	0214-505	Brk't., Hood Mt.
3	0214-350	Brk't, Upper Latch (2)	11	1807-008	Rivet, Pop Blk. (8)
4	1208-023-001	Latch, Rubber (2)	12	0214-504	Brk't, Hood Mt. RH
5	1604-013	Pin, 5/16x1-1/4 Clevis (2)	13	1913-297	Spacer, Pivot (2)
6	1604-144	Pin, Cotter (2)	14	0209-108	HHCS, 5/16Cx3/4G5 (4)
7	0214-351	Brk't, Lower Latch (2)	15	0214-503	Brk't, Hood Mt. LH
8	0214-352	Pl. Back-up (2)	16	2301-004	Washer, 5/16 Lock (4)
			17	1401-020	Nut, 5/16C Hex (4)

GUARDS & SHIELDS

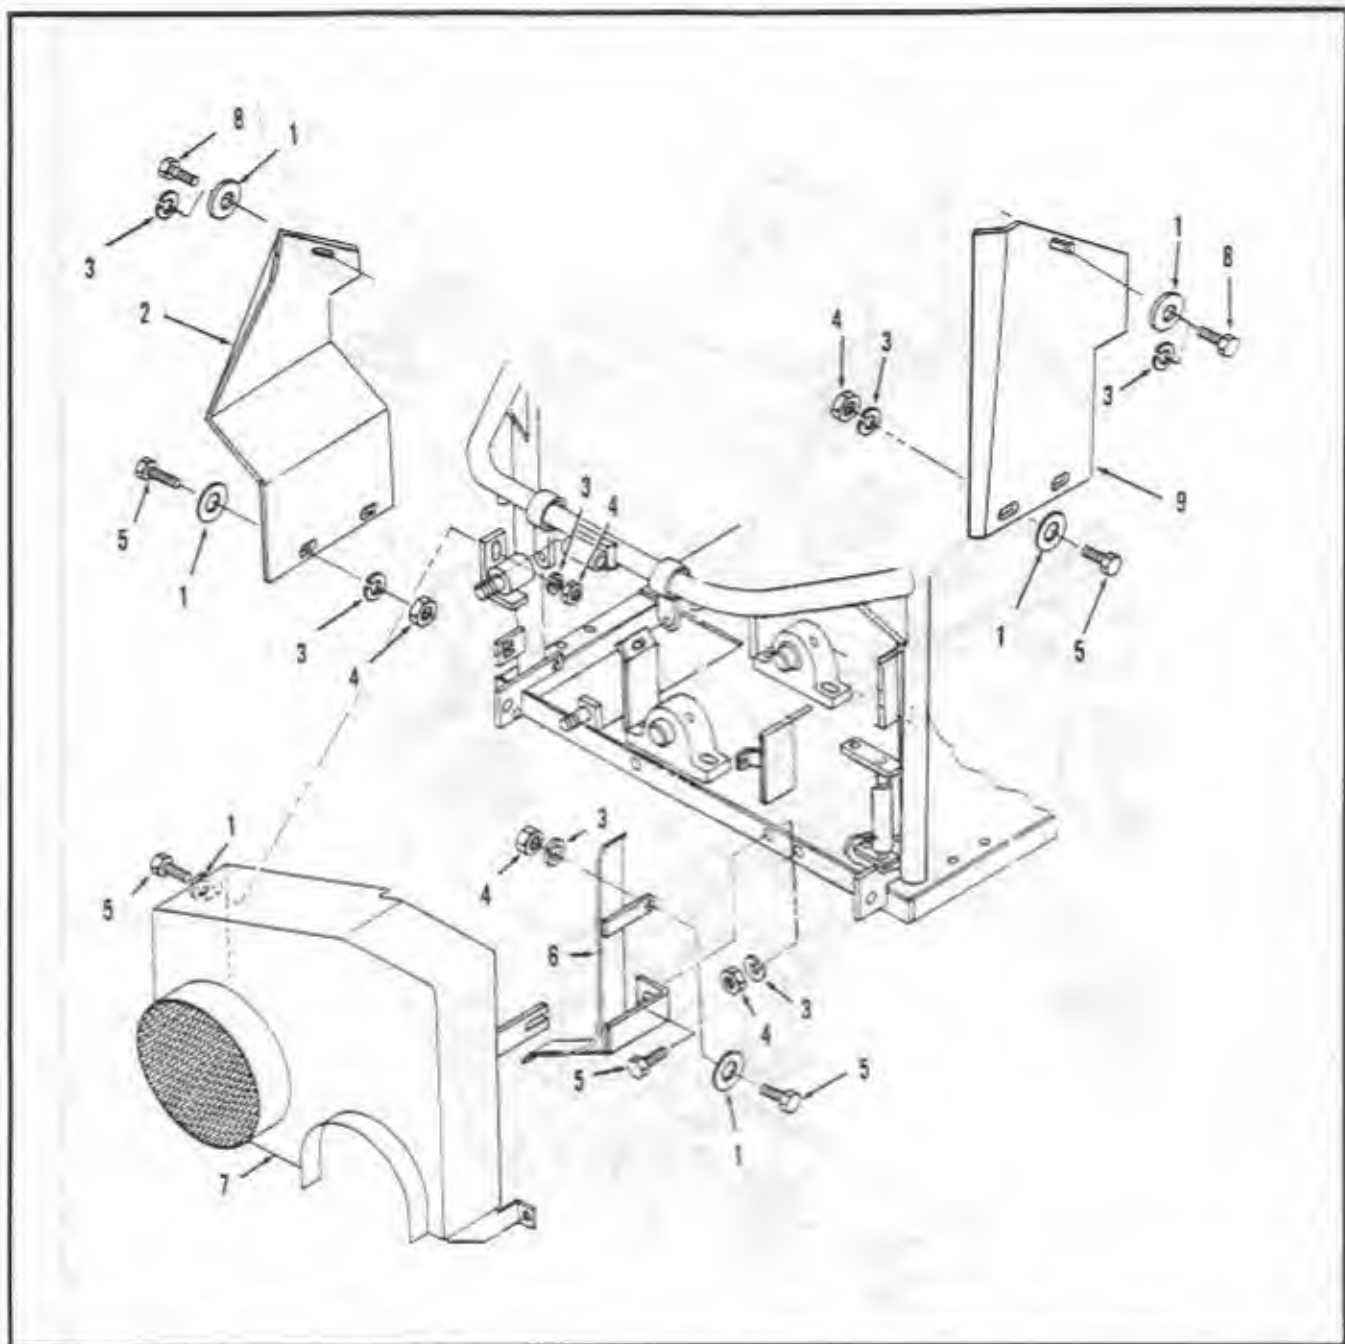

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	2301-021	Washer, 5/16 Flat (8)	6	0704-008	Guard, Belt
2	1906-022	Shield, Air Defl. RH	7	0704-015	Guard, Belt Wldt
3	2301-004	Washer, 5/16 Lock (9)	8	209-108	HHCS 5/16C x 3/4G5 (2)
4	1401-020	Nut, 5/16C Hex (7)	9	1906-023	Shield, Air Defl. LH
5	0209-114	HHCS, 5/16Cx1G5 (7)			

DASH PANEL

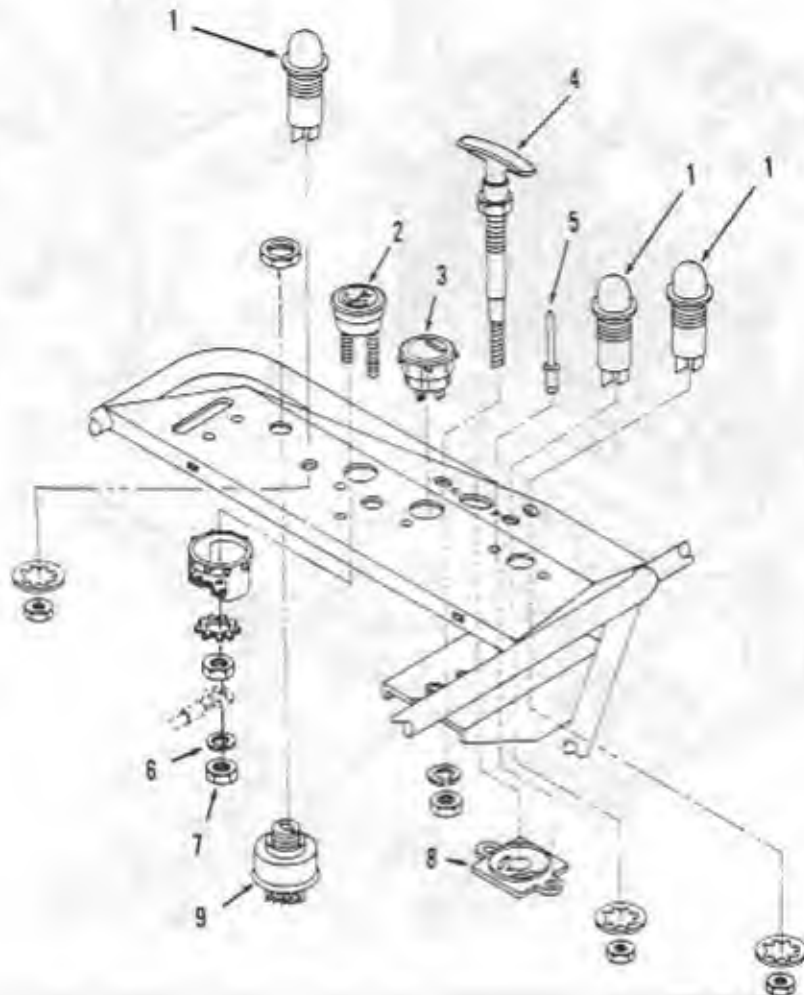


ITEM	PART NO.	DESCRIPTION
1	0230-001	Light, Indicator (3)
2	0706-002	Gauge, Ammeter
3	0706-003	Gauge Hour Meter
4	0301-145	Control, Throttle
5	1807-006	Pop, Rivet 1/8 x 5/8 (2)

ITEM	PART NO.	DESCRIPTION
6	2301-284	Washer, Lock (2)
7	1401-060	Nut, 10-32 (2)
8	0902-001	Inclinometer
9	P/O Engine	Switch (Kubota)


1923-066

ENGINE COMPONENTS

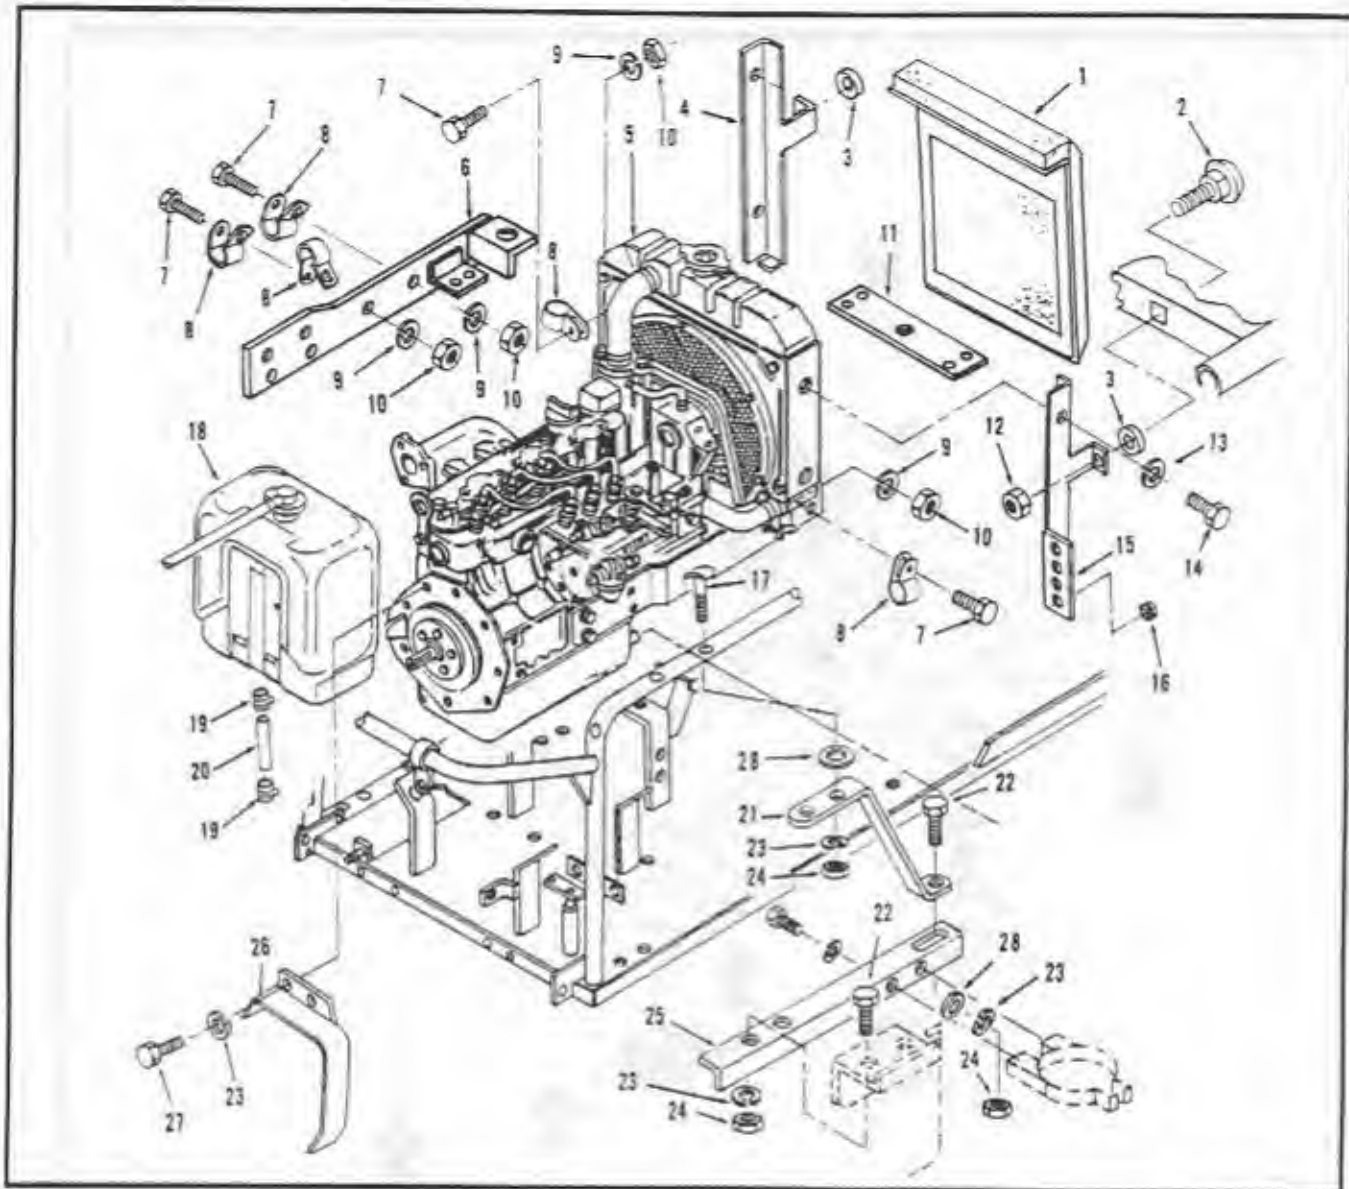

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1924-009	Screen, Chaff	15	0214-526	Brk't, Rad Screen LH
2	0209-043	Blt, Car 1/4Cx1 (2)	16	1811-004	Rubber, Leon Grommet (4)
3	1811-033	Isolator, Rubber (2)	17	0209-835	BLT, 5/16Cx2 CRVH (2)
4	0214-525	Brk't, Rad Screen RH	18	P/O Item 5	Tank, Over Flow
5	E260	Kubota D722 Engine	19	0307-026	Clamp, Hose (2)
6	0214-186	Brk't, Motor Mount	20	0812-093	Line, 32" Fuel
7	0209-021	HHCS, 1/4C x3/4G5 (4)	21	0213-056	Brce, Air Clnr.
8	0307-049	Clamp, 1/2" Mtg. (4)	22	0209-108	HHCS, 5/16Cx3/4G5 (3)
9	2301-003	Washer, 1/4 Lock (4)	23	2301-004	Washer, 5/16 Lock (7)
10	1401-010	Nut, 1/4C Hex (4)	24	1401-020	Nut, 5/16C Hex (7)
11	0214-188	Brk't, Motor Mount	25	0214-524	Brk't, Air Clnr.
12	1401-009	Nut, 1/4 C Cenloc (2)	26	0314-004	Cover, Flywheel
13	2301-001	Washer, 3/16 Lock (4)	27	0209-831	HHCS, M8-1.25x24 (2)
14	0209-834	HHCS M6-1x14 (4)	28	2301-021	Washer, 5/16 Flat (2)

ENGINE COMPONENTS

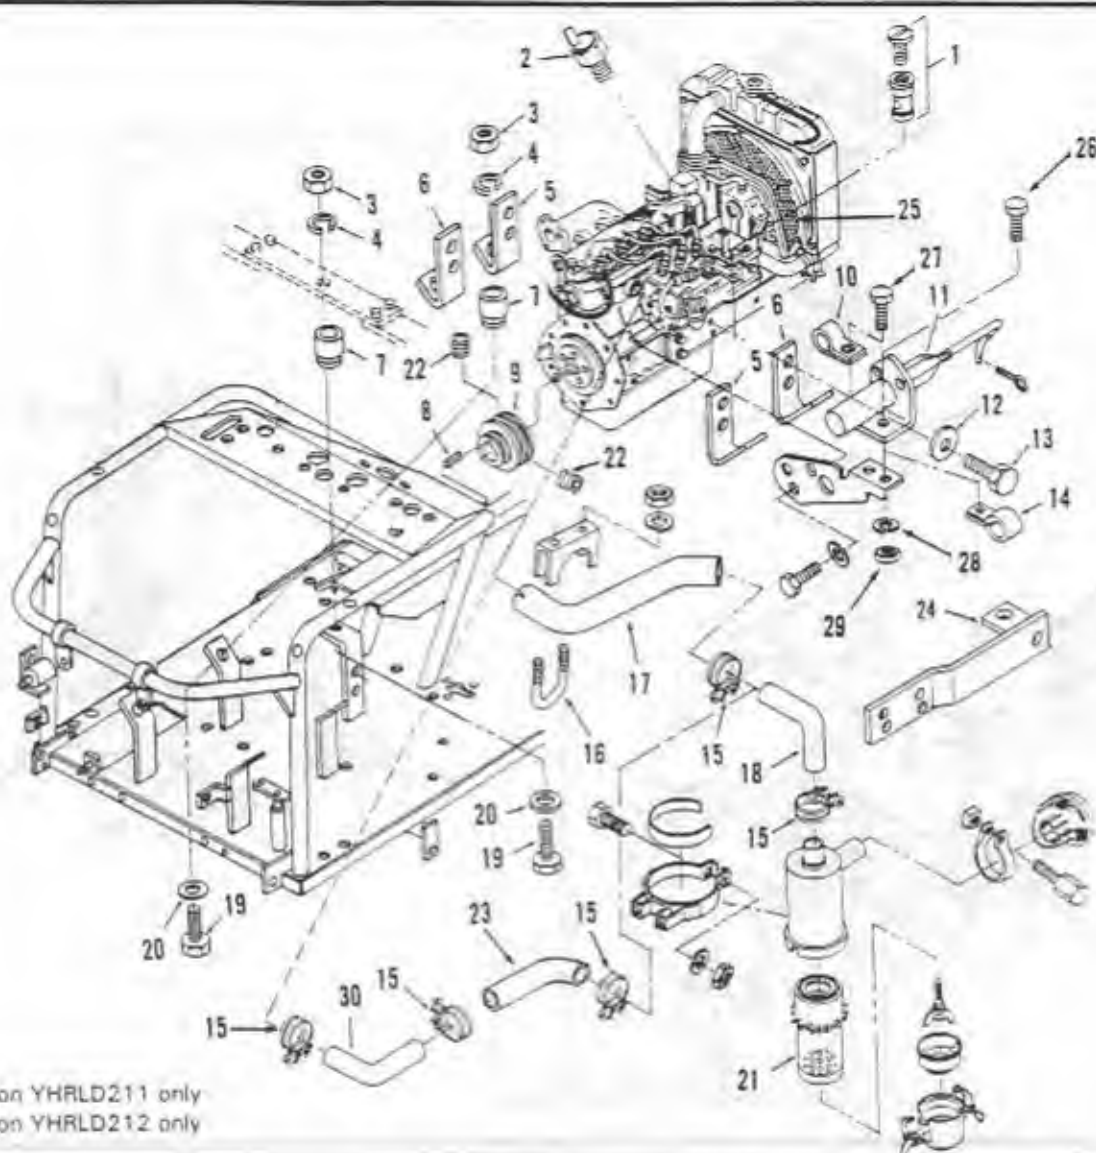


* Used on YHRLD211 only

** Used on YHRLD212 only


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0307-042	Clamp, Cable FT-191	16	0307-051	Clamp, 1 3/4 Muffler
2	1937-002	Sender, Temp.	17	2005-069	Tube, Air Clnr.*
3	1401-054	Nut, Hex 1/2F (5)	18	0812-099	Elbow, 90 Air Clnr.
4	2301-008	Washer, 1/2 Lock (5)	19	0209-534	HHCS, 1/2Fx2-3/4G5 (5)
5	0214-183	Mount, Motor (2)	20	2301-335	Washer, 1/2x1 3/4 Flat (5)
6	0214-184	Mount, Motor (2)	21	0610-021	Filter, Elem. Cleaner
7	1929-001	Mount, Rubber Motor (5)	22	1901-008	Screw, Set 5/16 x 5/16 (2)
8	1102-028	Key, Sq. 1/4x1 1/2	23	2005-068	Tube, Air Cleaner **
9	1608-129	Pulley, Eng Kubota	24	0214-187	Mt., Motor
10	0307-043	Clamp, Cable	25	1924-011	Screen, Fan D722
11	1923-056	Sol. Fuel w/Mt.	26	0209-843	HHCS, M6-1x20 (1)
12	2301-018	Washer, M 10 Lock (8)	27	0209-021	HHCS, 1/4C x 3/4 G5
13	0209-839	HHCS, M10-1.25x25 (8)	28	2301-003	Washer, 1/4 Lock
14	0307-049	Clamp, 1/2" Mtg.	29	1401-010	Nut, Hex 1/4C
15	0307-041	Clamp, 2" Hose (2)* (4)**	30	0812-100	Elbow, 90 Air Cleaner **

STEERING COMPONENTS

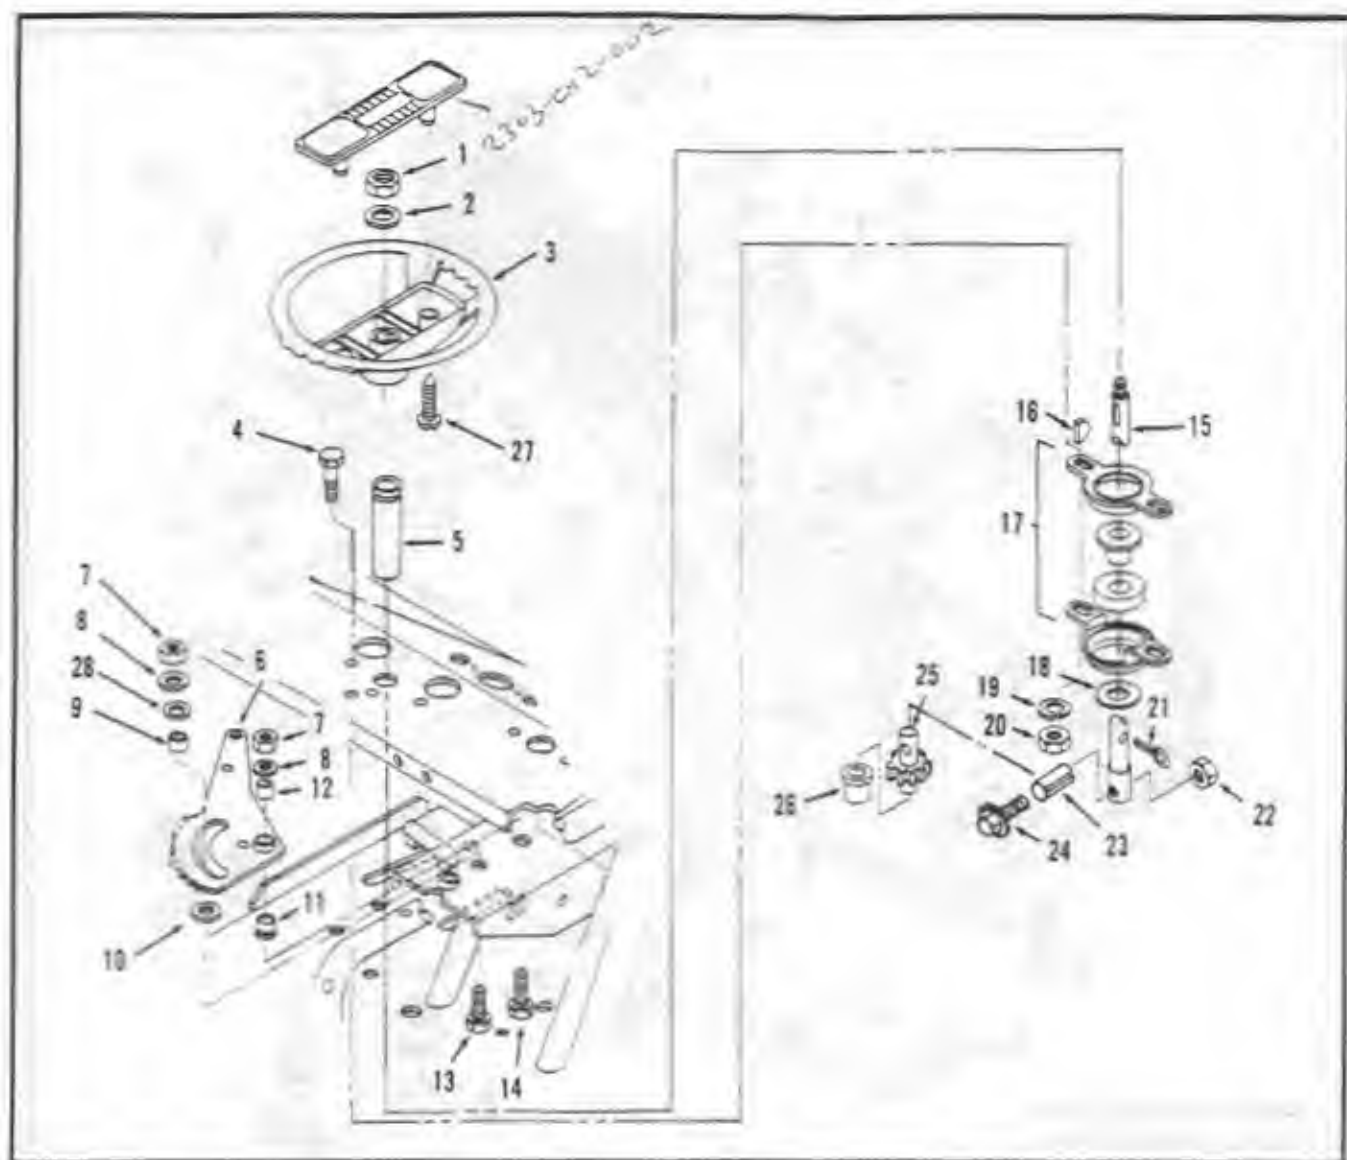


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1401-050	Nut, 1/2F Hex	15	1904-288	Shaft, Steering Asm
2	2301-096	Washer, Cup 5/8 Spring	16	1102-013	Key, Woodruff RC45
3	2303-012	Wheel, Steering	17	0204-181	Bearing, Upper Str.
4	0209-108	HHCS, 5/16Cx3/4G5 (2)	18	2301-028	Washer, 3/4 SAE F1
5	0806-229	Housing, Steer-Asm	19	2301-004	Washer, 5/16 Lock (2)
6	0702-149	Gear, Steer-Asm	20	1401-020	Nut, 5/16C Hex (2)
7	1401-051	Nut, 1/2F Hex Cen Lk (2)	21	1604-042	Pin, Cotter 1/8x1
8	2301-024	Washer, 1/2 Flat (2)	22	1401-099	Nut, 10C Hex Cenloc
9	1913-288	Spacer, Steer. Gear Pvt.	23	1604-163	Pin, Spg 8MMx32MM
10	2301-336	Washer, Thrust 1x2	24	0208-011	HHCS 10-24x1.75
11	0215-181	Bushing, Steering	25	0702-150	Gear, Steering-Pin
12	1913-287	Spacer, Steer. Gear Pvt.	26	0215-182	Bushing, Steering
13	0209-519	HHCS, 1/2Fx1-1/2G5	27	1901-041	Screw, #8x1/2 Self Thrd (2)
14	0209-517	HHCS, 1/2Fx2G5	28	2301-055	Washer, Conical

STEERING COMPONENTS

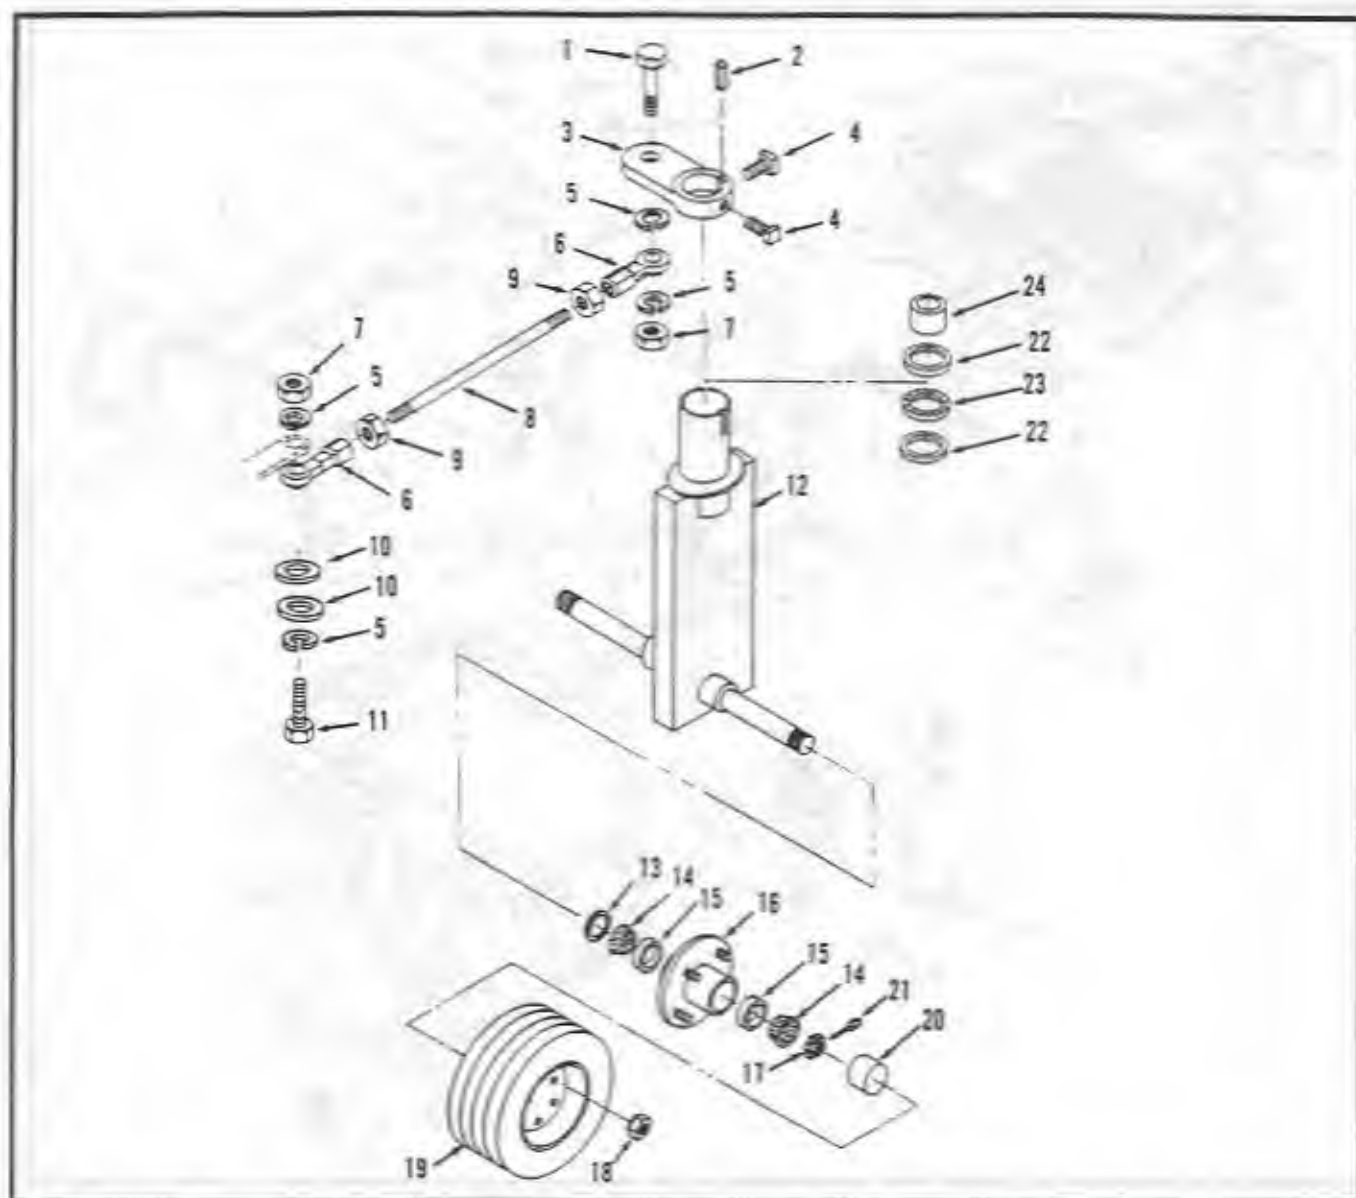


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0209-510	HHCS, 1/2Fx1-3/4G5	13	1804-025	Seal/Retainer (2)
2	1102-002	Key, Sq. 1/4x1	14	0204-075	Bearing, Cone (4)
3	0311-097	Collar, Steer-Arm	15	0312-016	Race Bearing (4)
4	1901-034	Screw Set, 3/8 X 3/4 (2)	16	0807-022	Hub Assem. (2)
5	2301-008	Washer, 1/2 Lock (4)	17	1401-096	Nut, Castle (2)
6	0502-018	Rod End, Female (2)	18	1401-057	Nut, Lug 1/2 F Tapered (10)
7	1401-051	Nut, 1/2 F Hex Cen Lk (3)	19	2305-024	Wheel Assem. (2)
8	1806-299	Rod, Steering Link	20	1906-010	Cover, Dust (2)
9	1401-054	Nut, Hex 1/2F (2)	21	1804-042	Pin, Cotter 1/8 x 1 (2)
10	2301-031	Washer, 7/16 Flat (2)	22	2301-097	Washer, thrust 1.53 (2)
11	0209-519	HHCS, 1/2F x 1- 1/2G5	23	0204-078	Bearing, Thrust
12	2501-054	Yoke Assem.	24	0215-101	Bushing

FUEL SYSTEM

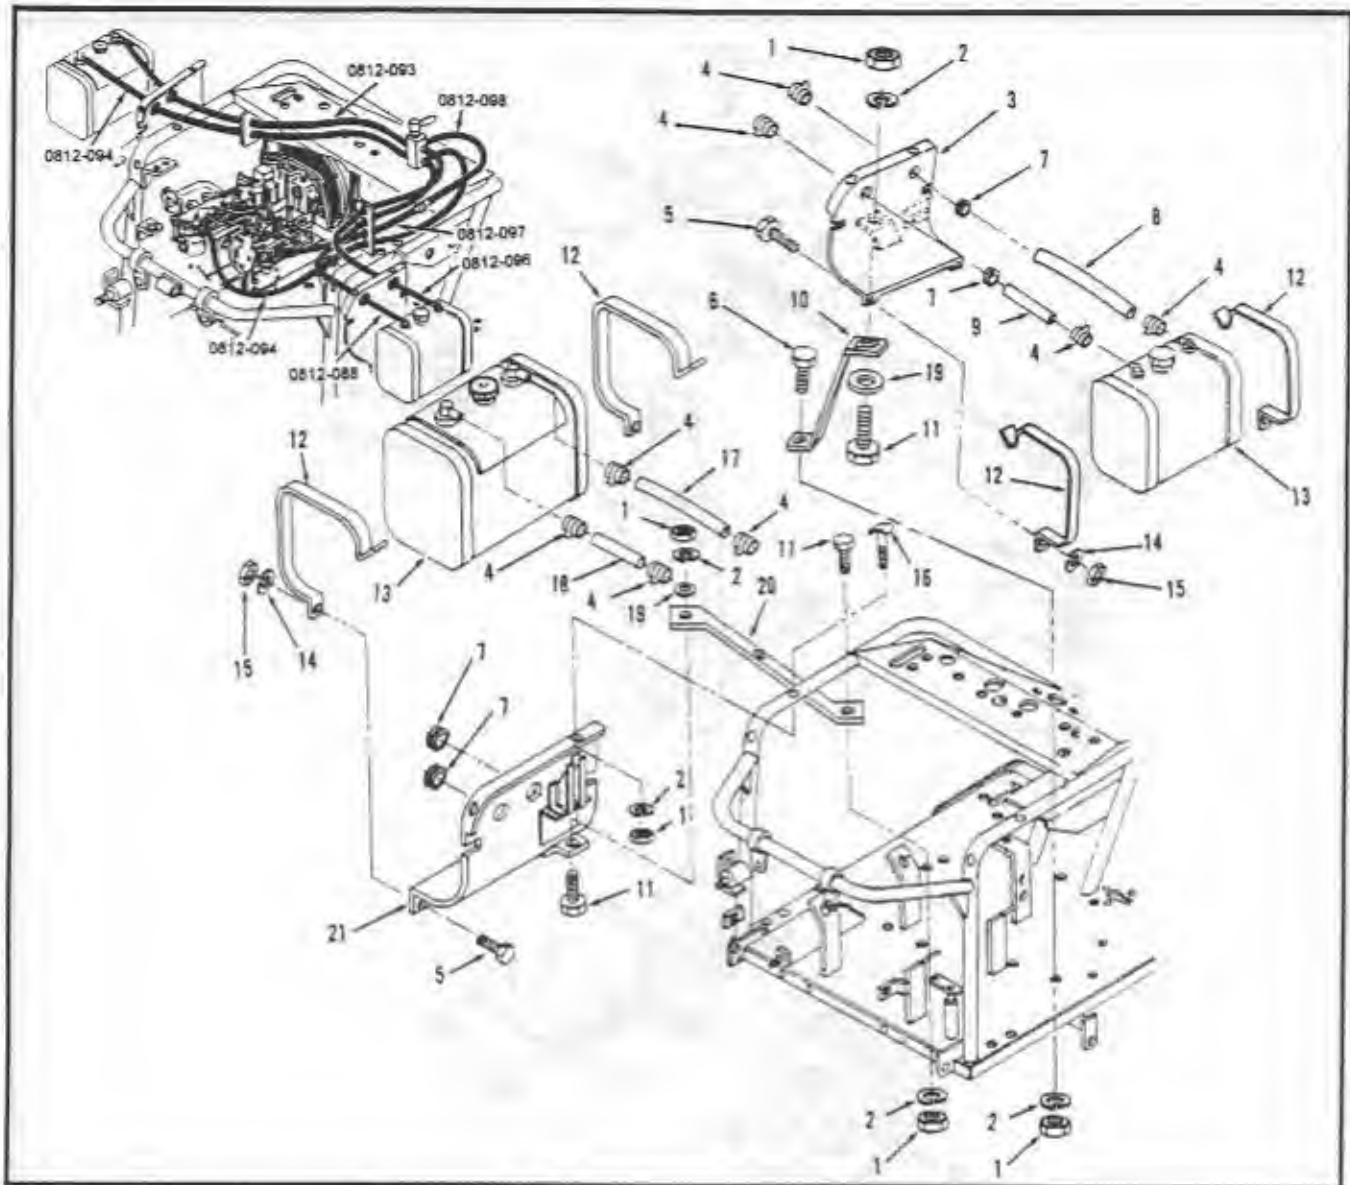


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1401-020	Nut, 5/16C Hex (8)	12	1918-022	Strap, Tank Mount (4)
2	2301-004	Washer, 5/16 Lock (8)	13	2001-026	Tank Asm. (2)
3	0214-523	Brk't, Tank Mt. LH	14	2301-003	Washer, 1/4 Lock (4)
4	0307-026	Clamp, Hose (8)	15	1401-009	Nut, 1/4C Cenloc (4)
5	0209-032	HHCS, 1/4Cx1-1/4G5 (4)	16	0209-835	BLT, 5/16Cx2 CRVH (4)
6	0209-108	HHCS, 5/16Cx3/4G5	17	0812-094	Line, 37" Fuel (2)
7	1811-004	Rubber, Leon Gromet (4)	18	0812-093	Line, 32" Fuel
8	0812-096	Line, 24-1/2" Fuel	19	2301-021	Washer, 5/16 Flat (2)
9	0812-088	Line, 27" Fuel	20	0213-008	Brce, Fuel Tank
10	0214-479	Brk't, Tank Mt. LH	21	0214-189	Brk't, Tank Mt. RH
11	0209-114	HHCS, 5/16x1G5 (3)			

FUEL SYSTEM

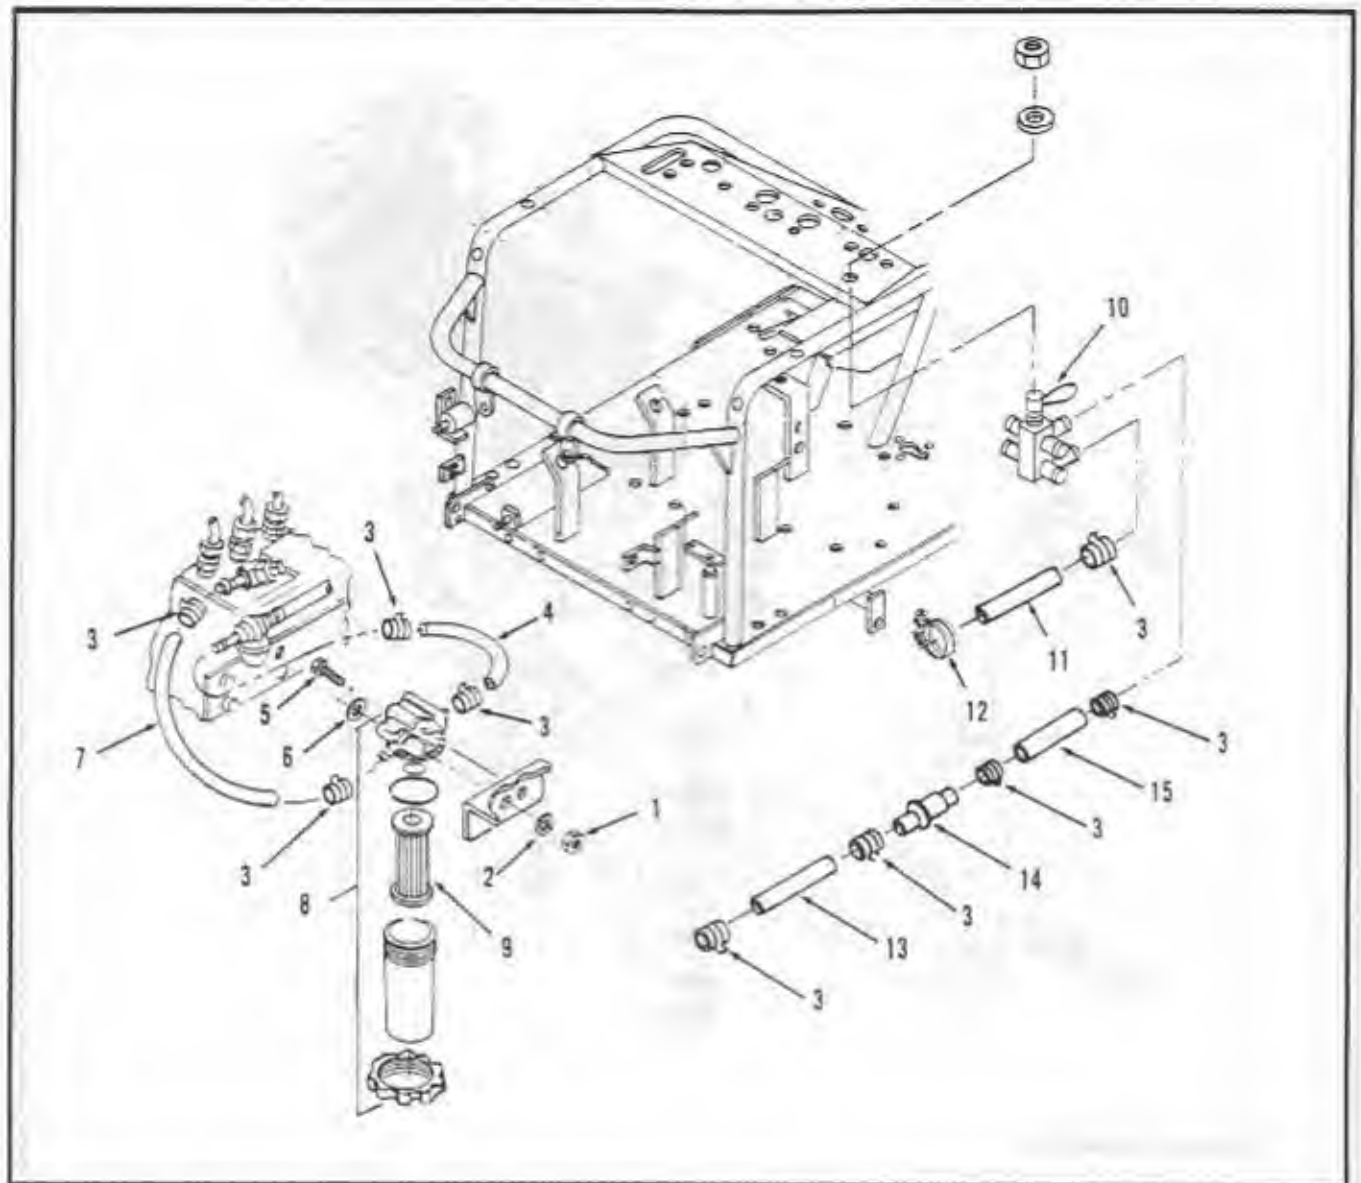

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1401-020	Nut, 5/16C Hex	9	0610-020	Filter Element, Diesel Fuel
2	2301-004	Washer, 5/16 Lock	10	2201-039	Valve, Fuel
3	0307-026	Clamp, Hose (9)	11	0812-094	Line, 37\" Fuel
4	0812-092	Line, 22\" Fuel	12	0307-045	Clamp, Hose .28-.62
5	0209-161	HHCS, 5/16Cx3G5	13	0812-097	Line, 13\" Fuel
6	2301-021	Washer, 5/16 Flat	14	0610-011	Filter, Fuel
7	0812-070	Line, 16\" Fuel	15	0812-098	Line, 8\" Fuel
8	P/O Engine	Filter, Diesel Fuel			


EXHAUST SYSTEM

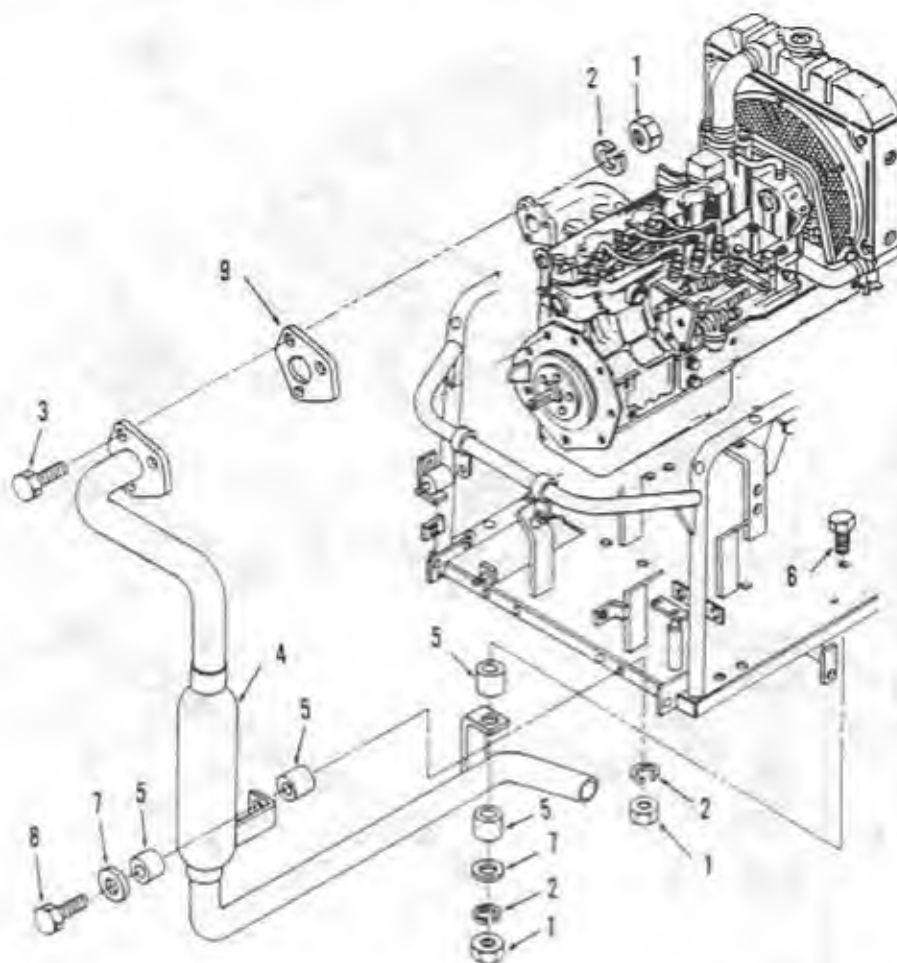

* Comes with Muffler


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1401-020	Nut, 5/16C Hex (3)	6	0209-138	HHCS, 5/16Cx2G5
2	2301-004	Washer, 5/16 Lock (3)	7	2301-021	Washer, 5/16 Flat (2)
3	0209-120	HHCS, 5/16 x 1 1/4G5 (3)	8	0209-161	HHCS, 5/16Cx3G5
4	1304-028	Muffler	9		* Gasket, Muffler
5	1924-004	* Shock Spacer Muffler (4)			

BLADE CONTROL LEVER

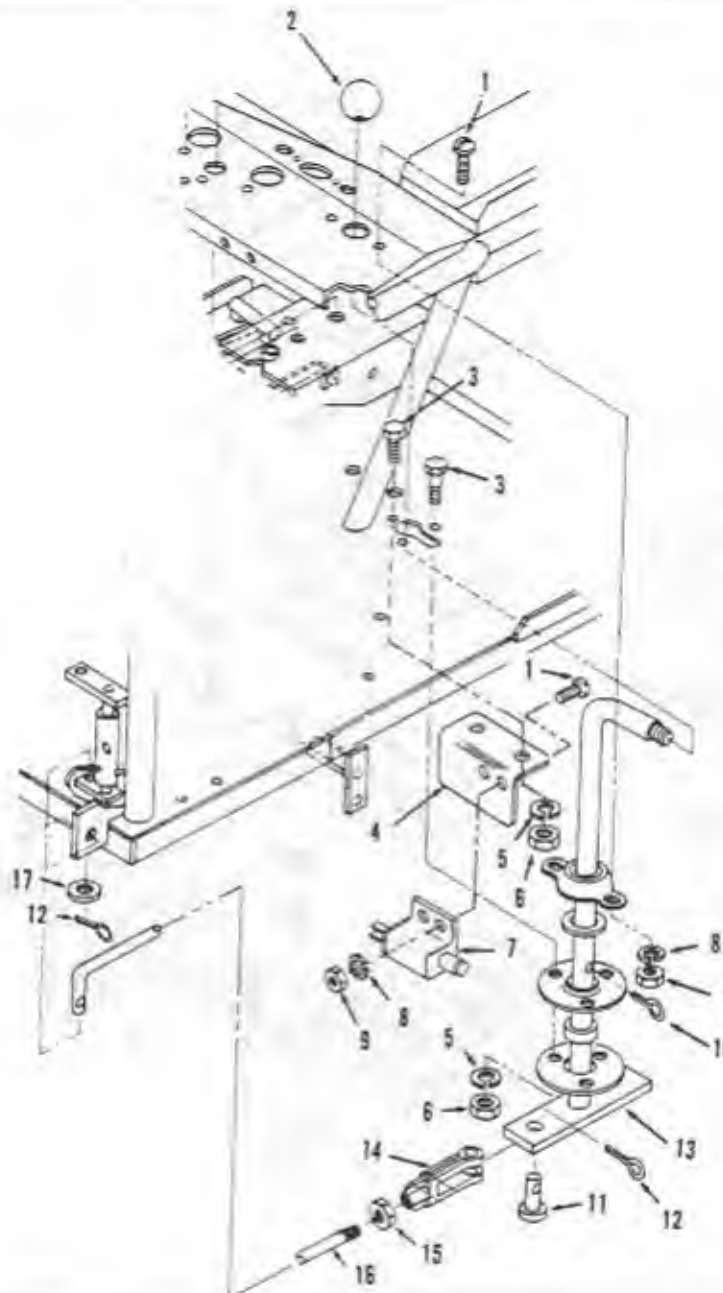


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1901-229	HWHS, 10Cx1/2 (4)	10	1604-042	Pin, Cotter 1/8x1
2	1104-012	Knob, 3/8x16 (Hyd)	11	1604-061	Pin, Rivet 3/8x1
3	0209-021	HHCS, 1/4C x3/4G5 (5)	12	1604-086	Pin, Ctr 3/32x1/2 (2)
4	0214-527	Brk't, Switch Blade	13	1201-098	Lever, Bld Eng Asm
5	2301-003	Washer, 1/4 Lock (5)	14	2501-030	Yoke
6	1401-010	Nut, 1/4C Hex (5)	15	1401-030	Nut, 3/8 C Hex
7	1923-025	Switch	16	1808-300	Rod, Blade Engage
8	2301-001	Washer, 3/16 Lock (4)	17	2301-022	Washer, 3/8 Flat
9	1401-001	Nut, 10C Hex (4)			

OPERATOR SEAT

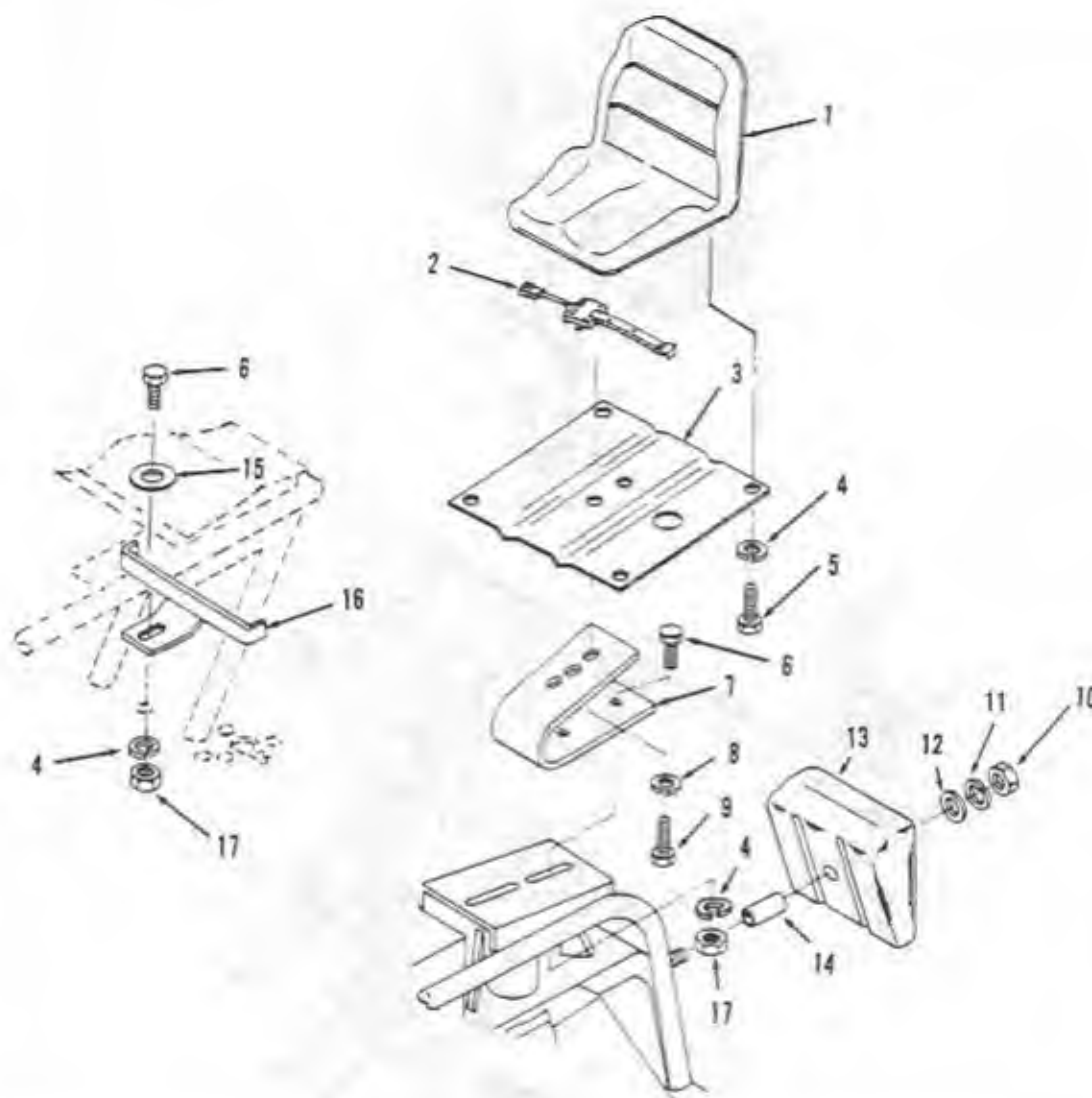


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1903-022	Seat, Tractor	10	1401-071	Nut, 5/8F Hex
2	1923-029	Switch, Seat Safety	11	2301-010	Washer, 5/8 Lock
3	0214-180	Brkt-Seat Mnt	12	2301-028	Washer, 3/4 SAE FLT
4	2301-004	Washer, 5/16 Lock (7)	13	2304-009	Weight, Rider
5	0209-108	HHCS, 5/16Cx3/4G5 (4)	14	1913-206	Sleeve, For Weight
6	0209-114	HHCS, 5/16Cx1G5 (3)	15	2301-021	Washer, 5/16 Flat (1)
7	1916-080	Spring, Seat	16	0214-206	Bracket
8	2301-008	Washer, 1/2 Lock (2)	17	1401-020	Nut, 5/16C Hex(3)
9	0209-480	HHCS, 1/2Cx1G5 (2)			

TRANSMISSION CONTROL PEDAL

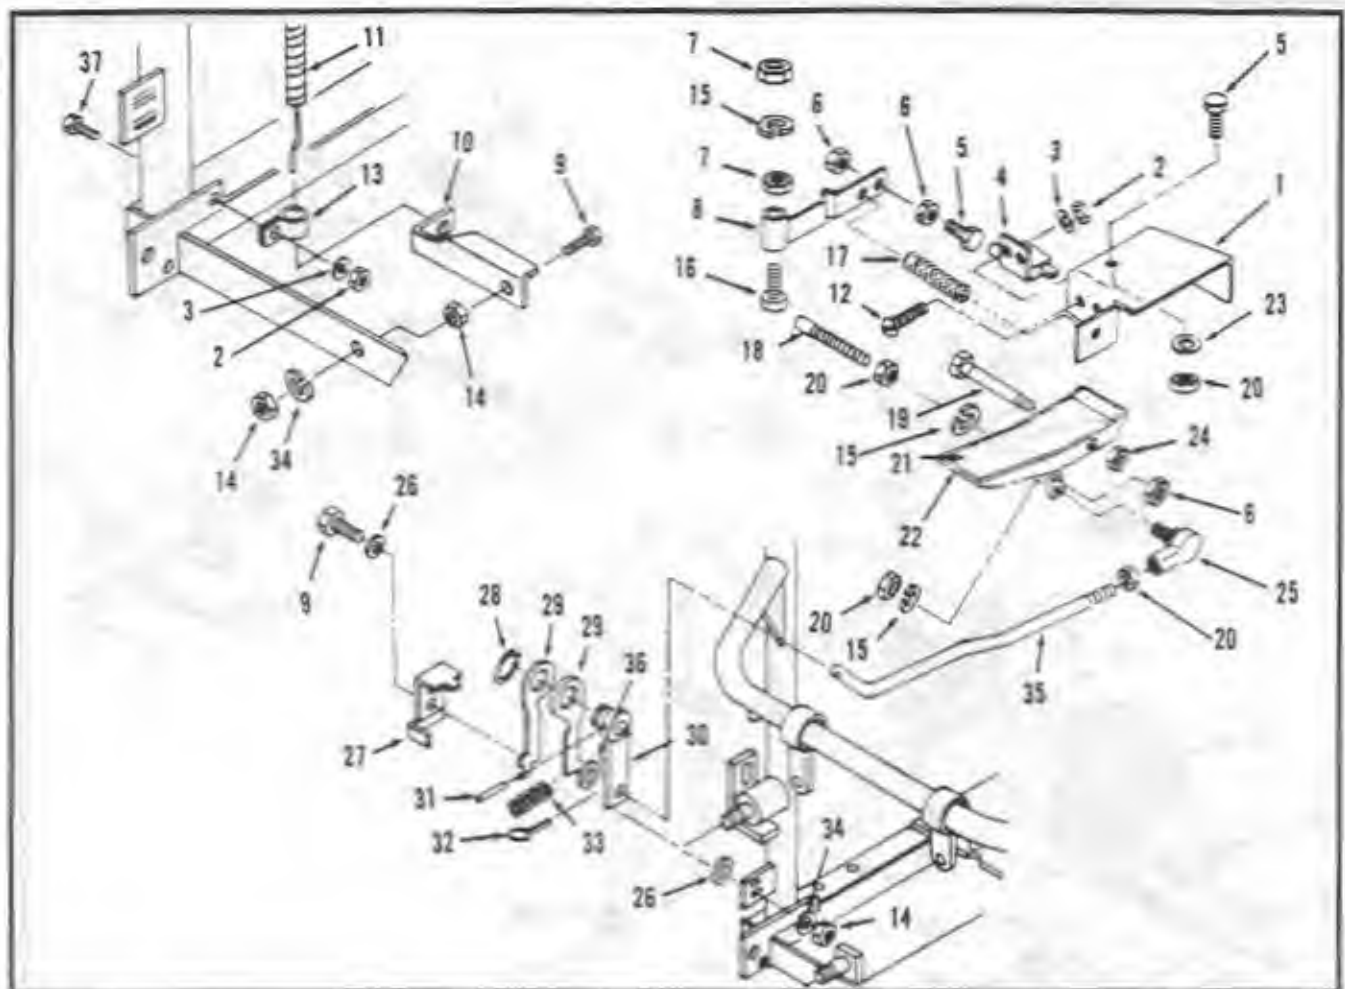

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0214-493	Brkt, Neutral Switch	20	1401-032	Nut, 3/8F Hex (3)
2	1401-001	Nut, 10C Hex (3)	21	1601-017	Pad, Hydro Pedal
3	2301-001	Washer, 3/16 Lock (3)	22	1602-024	Pedal Directional Control
4	1923-025	Switch	23	2301-004	Washer, 5/16 Lock
5	0209-126	HHCS, 5/16Cx1 1/2G5 (2)	24	1401-021	Nut, 5/16 Cenlock
6	1401-020	Nut, 5/16C Hex (3)	25	0502-017	End, Rod Swivel
7	1401-030	Nut, 3/8 C Hex (2)	26	2301-020	Washer, 1/4 Flat (4)
8	0100-008	Actuator, F&R Asm	27	0214-467	Brkt, Actuator
9	0209-049	HHCS, 1/4Cx1G5 (3)	28	1806-008	Ring, Snap Pillow B
10	0102-149	Arm, By-Pass Valve	29	0214-453	Brkt, Neutral Return (2)
11	0301-155	Cable, Trans. Neutral	30	0102-135	Arm, For. & Reverse
12	1901-229	HWHS, 10Cx1/2 (2)	31	1604-160	Pin, Roll 6MMx35MM
13	0307-004	Clamp	32	1604-086	Pin, Ctr 3/32x1/2
14	1401-010	Nut, 1/4C Hex (4)	33	1916-177	Spring, Small
15	2301-006	Washer, Lock 3/8 (3)	34	2301-003	Washer, 1/4 Lock (3)
16	0209-350	HHCS, 3/8Cx2-1/2G5	35	1806-283	Rod, For. & Reverse
17	1916-175	Spring, Tension	36	2301-022	Washer, Flat 5/16
18	1604-157	Pin, Switch	37	0208-002	Bolt, #10-24x3/4RHS
19	0208-181	HHCS, 5/16Cx3-3/4G5			


TRACTION DRIVE SYSTEM

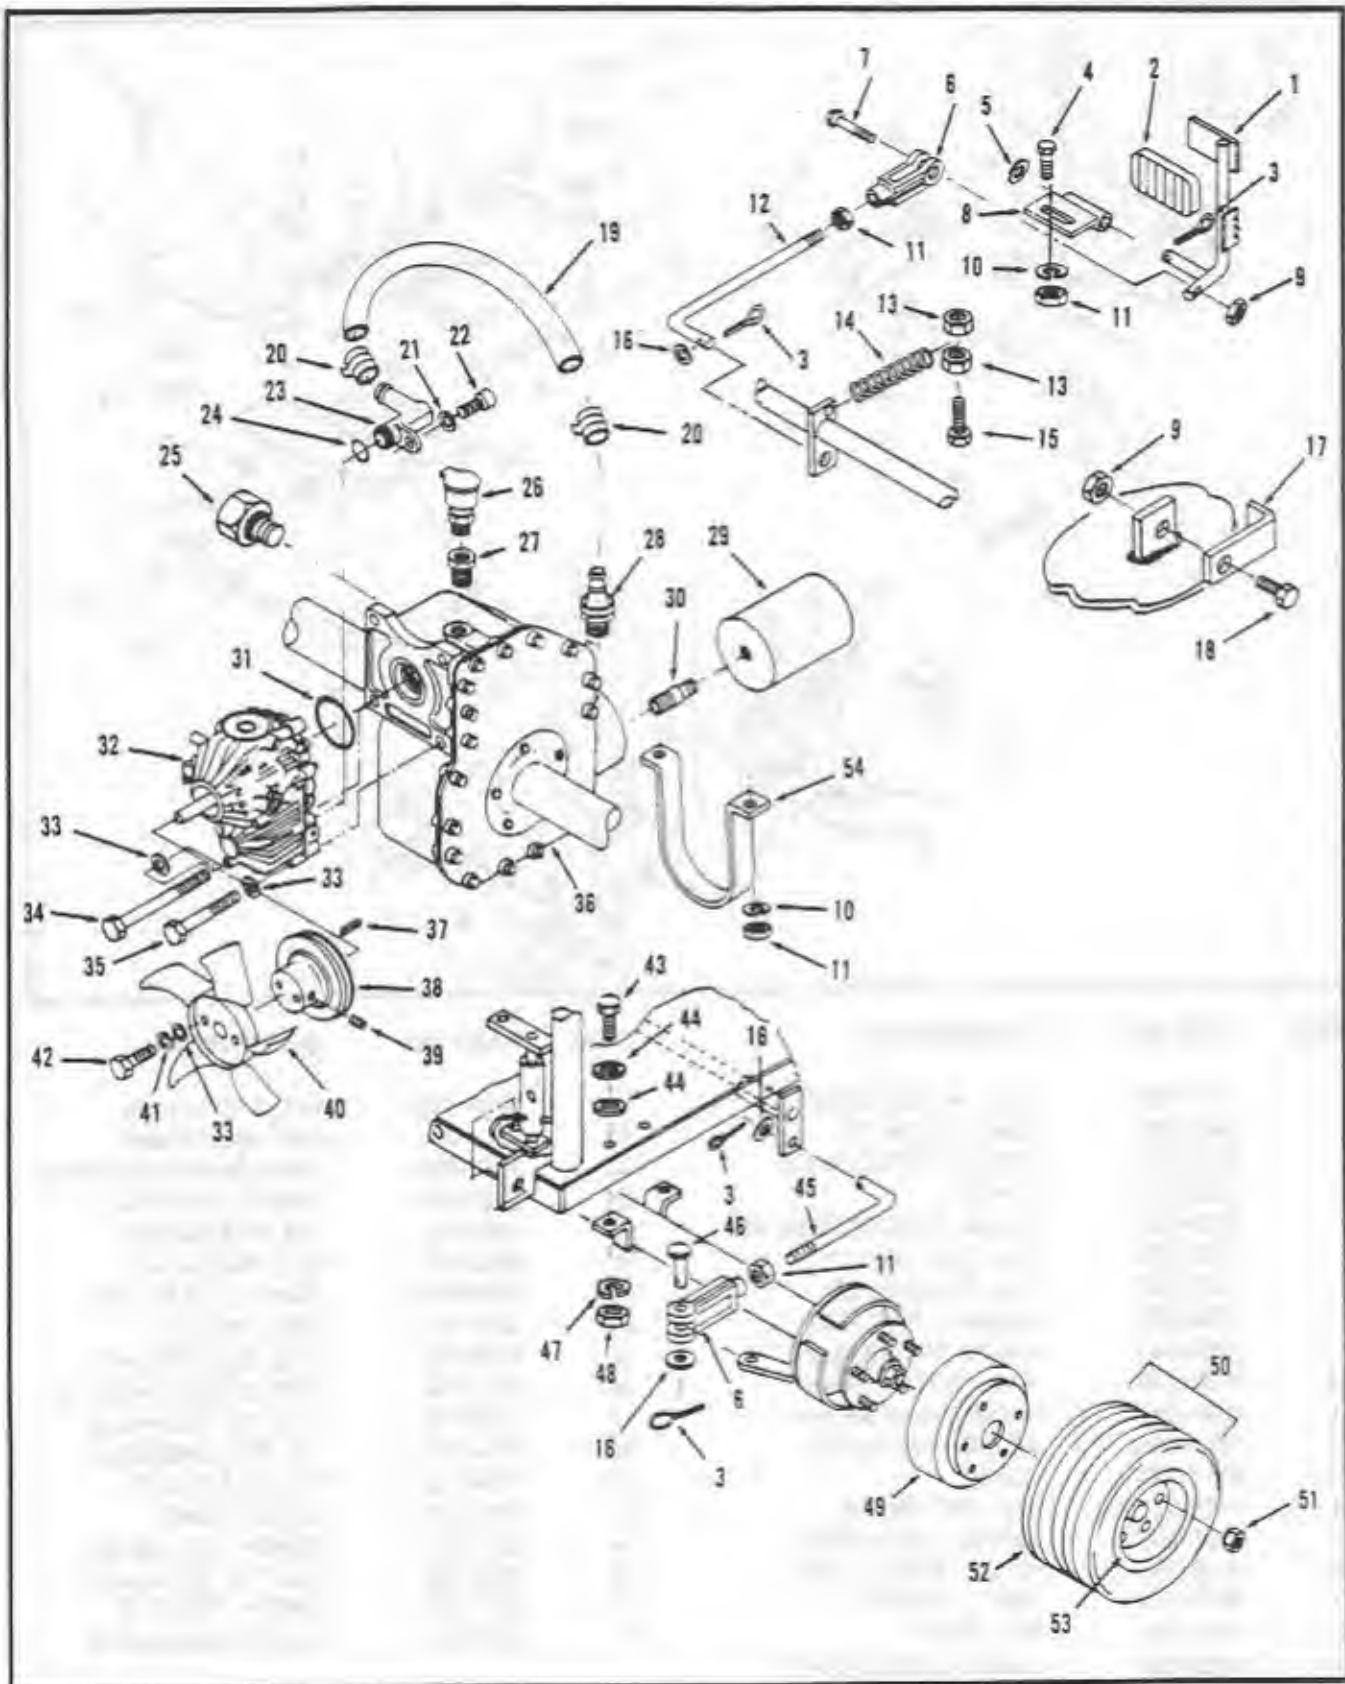

TRACTION DRIVE SYSTEM

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1602-011	Pedal	28	0101-153	Adapter, Hose
2	1601-001	Pad	29	0610-018	Filter, Trans. Oil
3	1604-086	Pin, Cotter 3/32 x 1/2 (4)	30	0101-155	Adapter
4	0209-114	HHCS, 5/16Cx1G5	31	1902-073	O Ring
5	2301-022	Washer, 3/8 Flat	32	2006-077	Trans. BU21L-310
6	2501-027	Yoke, Rod 5/16 (3)	33	2301-020	Washer, 1/4 Flat (6)
7	0209-136	HHCS, 5/16Cx2G5	34	0209-831	HHCS, M8-1.25x24
8	0214-153	Bracket	35	0209-161	HHCS, 5/16Cx3G5
9	1401-021	Nut, 5/16 Canlock (2)	36	2006-078	Tr Axle Asm
10	2301-004	Washer, 5/16 Lock (2)	37	1102-059	Key, 5MMx1-1/4
11	1401-020	Nut, 5/16C Hex (4)	38	1608-407	Pulley, Pump Motor
12	1808-287	Rod, Idler C/S	39	1901-006	Screw, Set 5/16x1/4
13	1401-010	Nut, 1/4C Hex (2)	40	0612-006	Fan, Blower Eaton
14	1916-012	Spring, C/S Lever	41	2301-003	Washer, 1/4 Lock (2)
15	0209-050	HHCS, 1/4Cx2G5	42	0209-045	HHCS, 1/4Cx1-3/4G5 (2)
16	2301-021	Washer, 5/16 Flat (3)	43	0209-350	HHCS, 3/8Cx2-1/2G5 (4)
17	0217-012	Brake, Park Lock	44	2301-022	Washer, 3/8 Flat (8)
18	0209-108	HHCS, 5/16Cx3/4G5	45	1808-200	Rod, Brake Hydro (2)
19	0812-067	Hose	46	1604-013	Pin, 5/16x1-1/4Clevis (2)
20	0307-039	Clamp, Hose (2)	47	2301-006	Washer, 3/8 Lock (4)
21	2301-296	Washer, 3/16 Flat	48	1401-030	Nut, 3/8 C Hex (4)
22	0209-834	HHCS M6x1x14	49	0217-018	Brake, Drum Kit (2)
23	0101-154	Fitting, Hose	50	2305-022	Wheel (2)
24	1806-145	O Ring	51	1401-061	Nut, 1/2C Tapered (10)
25	1606-069	Plug, O-Ring 6408-8	52	2003-067	Tire, 16 x 6.5 (2)
26	0315-012	Cup, Oil YHR Hydro	53	1805-026	Rim, Beaded Front (2)
27	0215-183	Bushing, 1/4x1/2Pipe	54	0704-367	Guard, Oil Filter (1)


BELT DRIVES

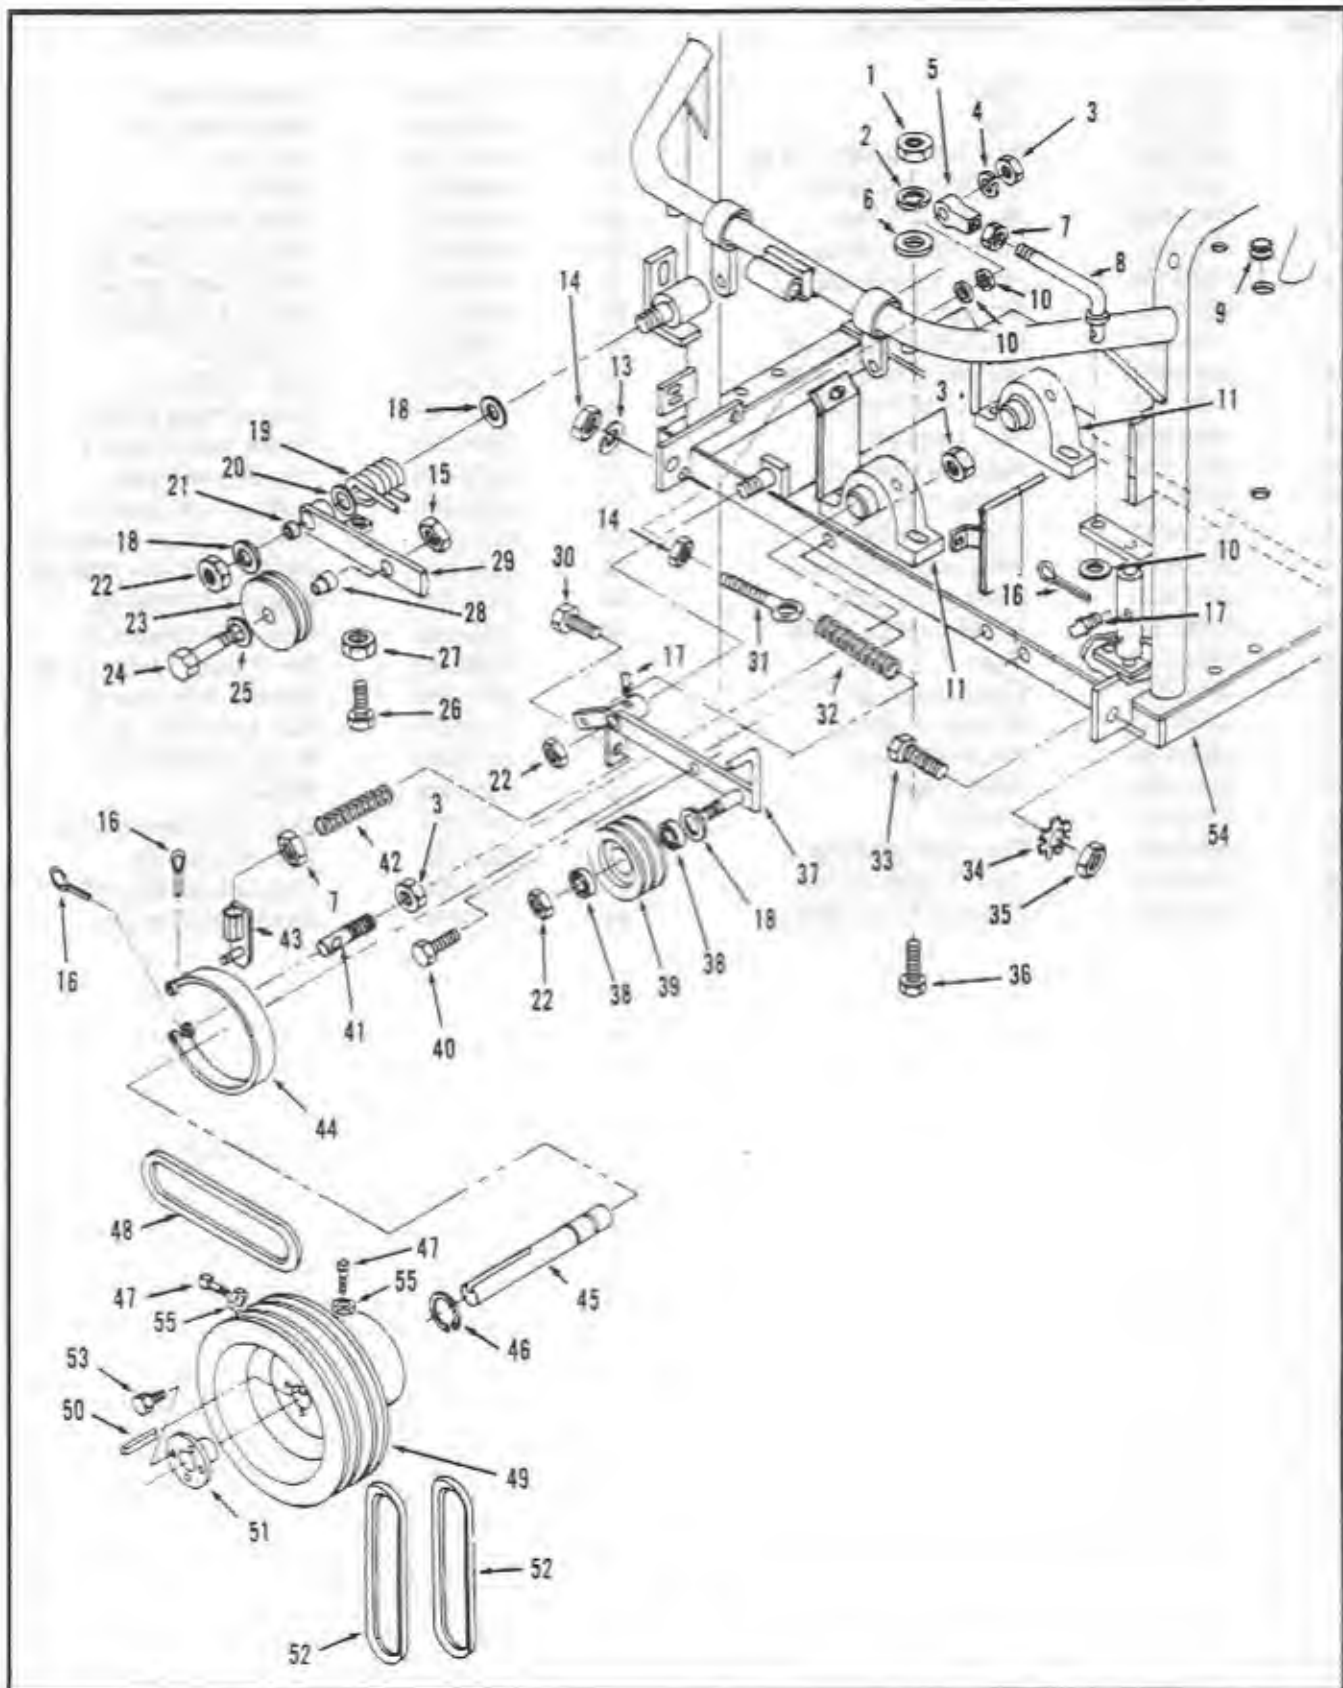

BELT DRIVES


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1401-040	Nut, 7/16C Hex (4)	29	0102-133	Arm, Idler Asm.
2	2301-007	Washer, 7/16 Lock (4)	30	0209-341	HHCS, 3/8Fx2G5
3	1401-030	Nut, 3/8 C Hex (2)	31	0212-003	Bolt Eye 3/16x2
4	2301-006	Washer, 3/8 Lock	32	1916-116	Spring
5	0502-002	End, Rod	33	0209-617	HHCS, 5/8Fx1-1/2G5 (2)
6	2301-031	Washer, 7/16 Flat (4)	34	2301-011	Washer, 5/8 Star (2)
7	1401-032	Nut, 3/8F Hex (2)	35	1401-069	Nut, 5/8F Hex Jam (2)
8	1808-284	Rod, Engaging Idler	36	0209-425	HHCS, 7/16Cx1-1/2G5 (4)
9	1811-028	Grommet, Rubber	37	0102-152	Arm, Idler Front
10	2301-022	Washer, 3/8 Flat (3)	38	0204-019	Bearing, Hub 5/8 (2)
11	0204-077	Bearing P B (PTO) (2)	39	1608-148	Pulley, Eng Idler
12	1811-025	Grommet, Rubber	40	0209-320	HHCS, 3/8Cx1-1/4G5
13	2301-001	Washer, 3/16 Lock	41	1604-103	Pin, Brake Band Hyd
14	1401-099	Nut, 10C Hex Cenloc (2)	42	1916-174	Spring, Tension
15	1401-051	Nut, 1/2F Hec Cenloc	43	0214-276	Brk't, Brake Band
16	1604-086	Pin, Ctr 3/32x1/2 (3)	44	0217-020	Brake, Band 20" Com
17	0603-004	Fitting, Grease (2)	45	1904-191	Shaft, Pulley PTO
18	1913-040	Spacer, 5/8x7/8 (3)	46	1806-008	Ring, Snap Pillow Blk (2)
19	1916-161	Spring, Tension	47	1901-136	Screw, Set 5/16x1/4 (2)
20	1913-085	Spacer, FSP End	48	0205-534	Belt, Pump
21	0215-177	Bushing	49	1608-119	Pulley, PTO Kubota
22	1401-070	Nut, 5/8F Hex Cenloc (3)	50	1102-058	Key, 1/4 x 1/4 x 4"
23	1608-365	Pulley, Idler 3"	51	0215-175	Bushing, PTO Pulley
24	0209-517	HHCS, 1/2Fx2G5	52	0205-538	Belt, PTO (2)
25	2301-334	Washer, Swivel Whl.	53	0209-021	HHCS, 1/4 x 3/4G5 (4)
26	0209-108	HHCS, 5/16Cx3/4G5	54	0605-463	Frame, WLDT Diesel
27	1401-020	Nut, 5/16C Hex	55	1401-020	Nut, 5/16C Hex (2)
28	1913-240	Spacer, Idler Pulley			

HYDRAULIC SYSTEM

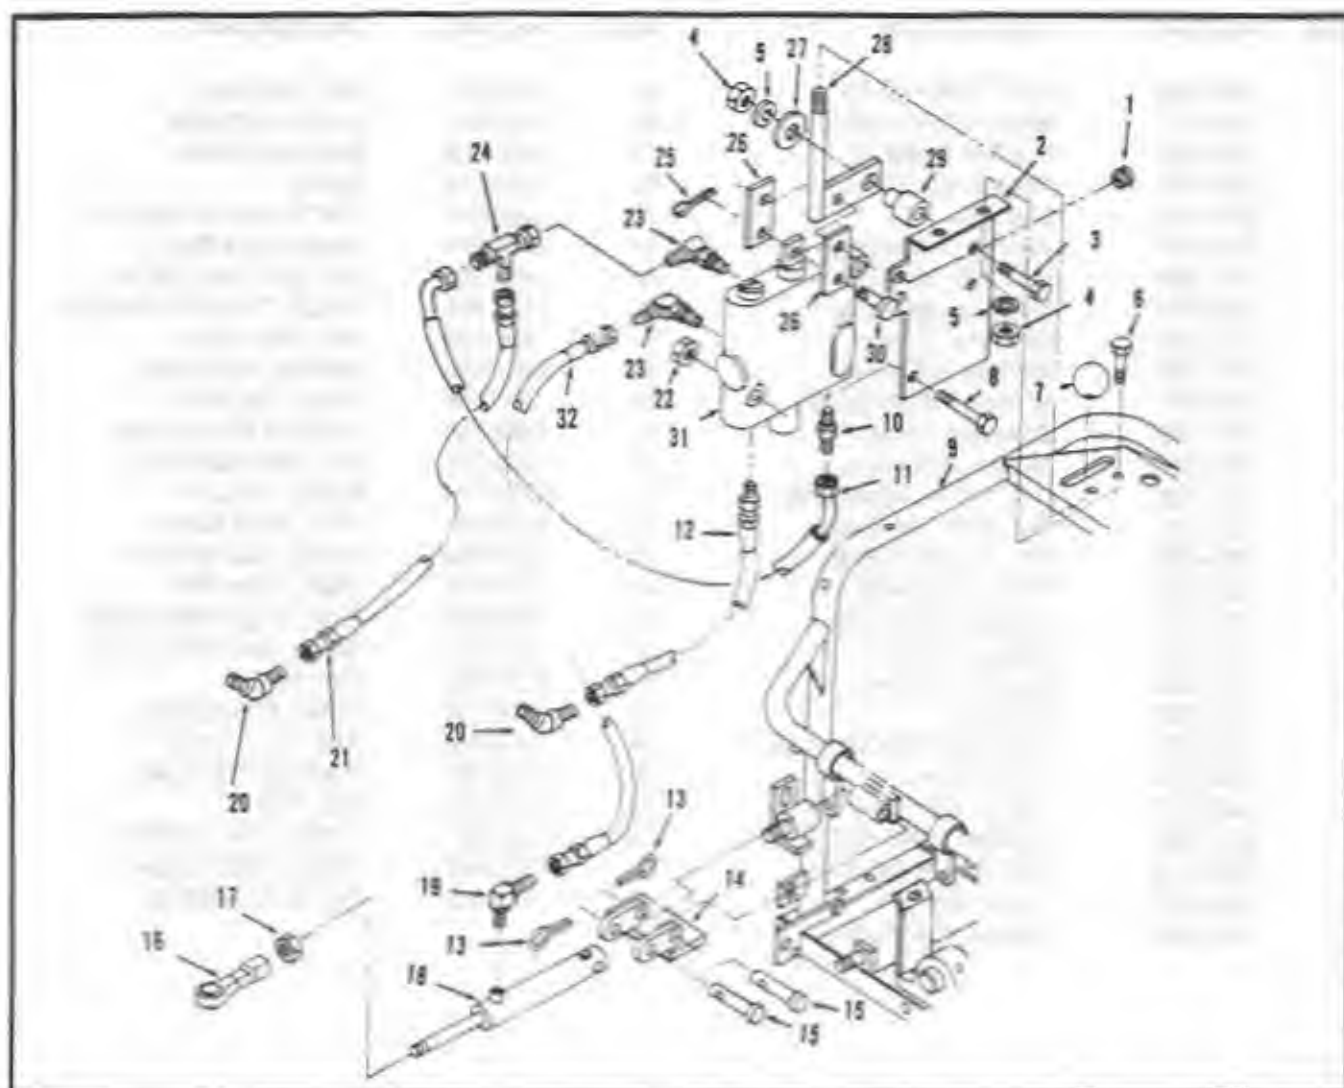


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1811-004	Rubber, Leon Gromet (2)	17	1401-069	Nut, 5/8F Hex Jam
2	0214-528	Brk't, Valve Mount	18	0319-002	Cylinder, Asm Leon
3	0209-126	HHCS, 5/16Cx1-1/2G5 (2)	19	0101-116	6801-4 Adapter
4	1401-020	Nut, 5/16C Hex (3)	20	0101-165	Adapter 45 (2)
5	2301-004	Washer, 5/16 Lock (3)	21	0812-050	Hose, Hydraulic
6	0209-108	HHCS, 5/16Cx3/4G5 (2)	22	1401-009	Nut, 1/4 C Centloc (2)
7	1104-012	Knob, 3/8x16 (Hyd)	23	0101-117	6801-6 Adapter (2)
8	0209-045	HHCS, 1/4Cx1-3/4G5 (2)	24	0101-162	Adapter, Tee Swivel
9	0805-463	Frame, Wildt Diesel	25	1604-092	Pin Cotter 1/16 x 1 (2)
10	0101-159	Adapter, Male	26	1204-006	Link, Lift Valve (2)
11	0812-090	Hose, Hydraulic	27	2301-021	Washer, 5/16 Flat
12	0812-091	Hose, Hydraulic	28	1201-099	Lever, Lift Asm.
13	0309-030	Clip, Hairpin (2)	29	1913-286	Spacer, Lever Pivot
14	0214-274	Brk't, Lift Cylinder	30	1604-162	Pin, Clevis Lift (2)
15	1604-063	Pin, 5/8x2-3/4 (2)	31	2201-037	Valve, Control
16	0502-015	End, Rod 5/8	32	0812-072	Hose, Hyd. Lift

BRAKE SYSTEM

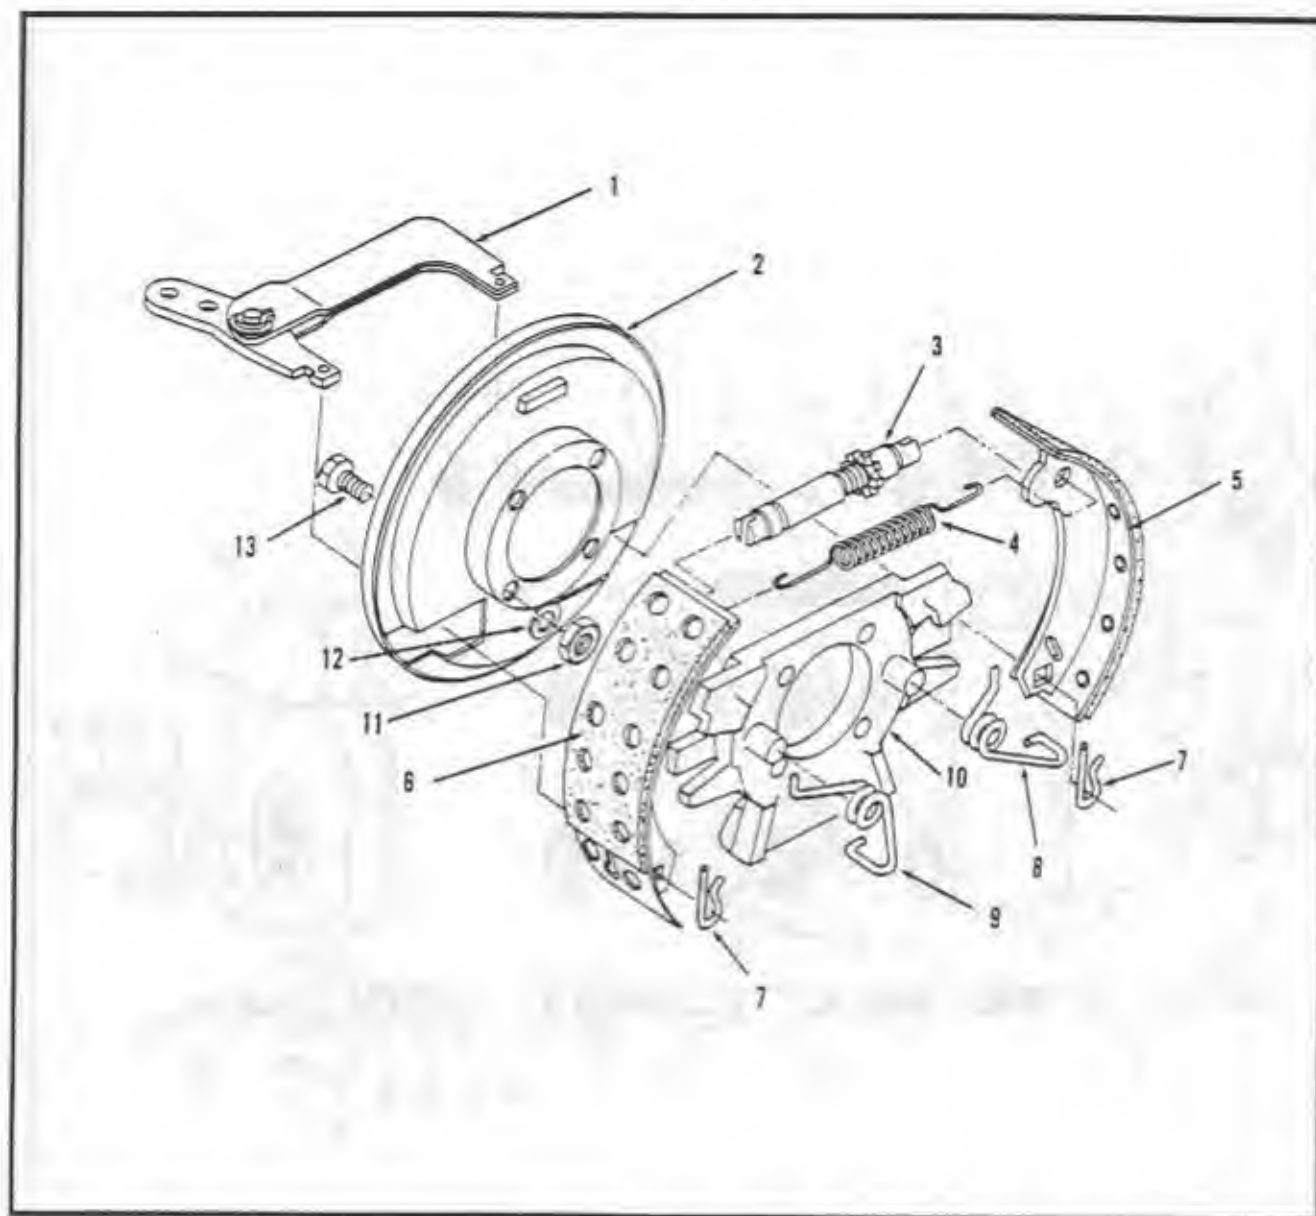

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1201-095	Assm. Park Br. Lever (2)	8	1916-144	Spring, Shoe Ret. (RH) Rd (2)
2	1906-015	Shield, Dust (2)	9	1916-143	Spring, Shoe Ret. (LH) Gn (2)
3	1901-216	Assm., Adj. Screw Nut (2)	10	1935-003	Torque Spider, Finished (2)
4	1916-145	Spring, Adj. Screw (Blue) (2)	11	1401-020	Nut, 5/16C Hex (8)
5	1908-013	Assm., Shoe & Lining (2)	12	2301-004	Washer, 5/16 Lock (8)
6	1908-012	Assm., Shoe & Lining (2)	13	0209-120	HHCS, 5/16C x 1-1/4 G5 (8)
7	1604-133	Retainer, Lever Pin (4)			


HYDROSTATIC DIFFERENTIAL

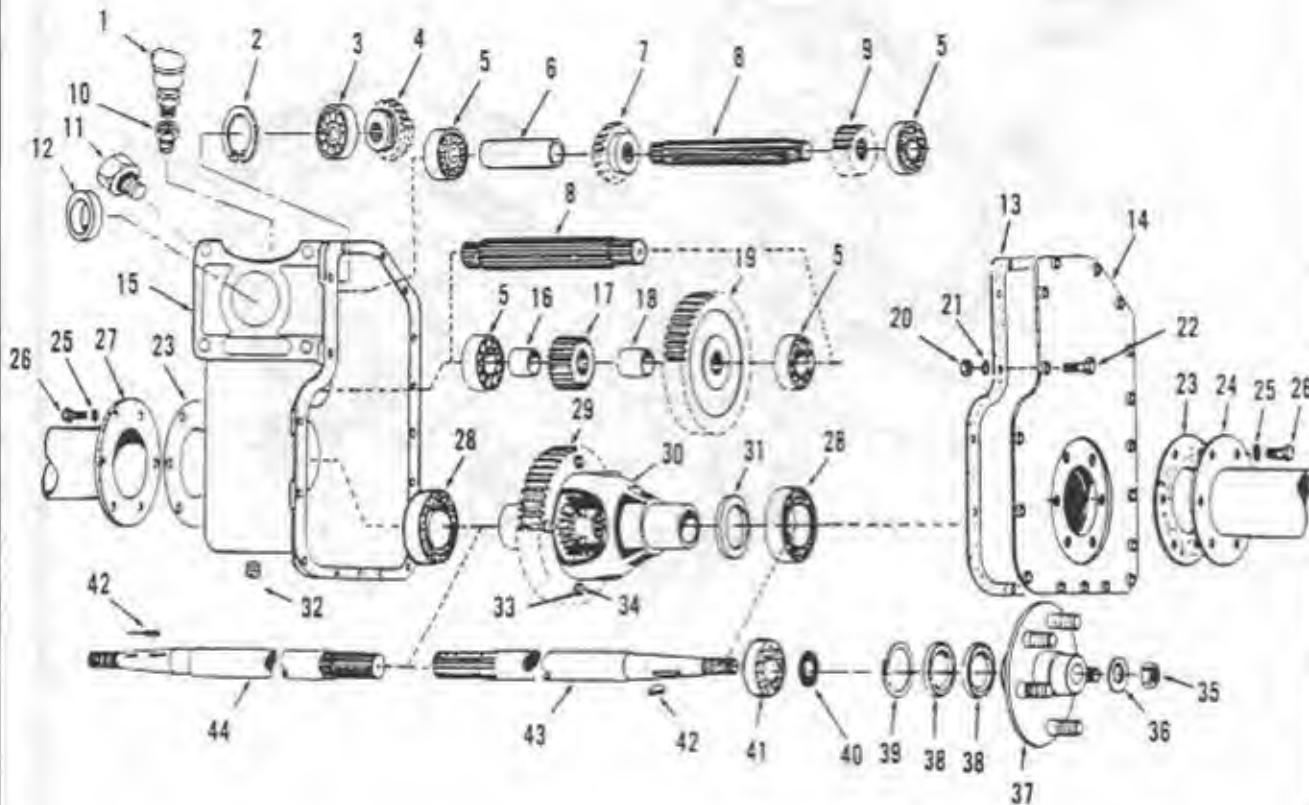

HYDROSTATIC DIFFERENTIAL


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0315-012	Cup, Oil Breather	24	0806-091	Housing, Axle Long
2	1806-144	Ring, Snap	25	2301-006	Washer, 3/8" Lock (12)
3	0204-159	Bearing, Ball	26	0209-307	Bolt, 3/8" x 3/4" NC (12)
4	0702-148	Gear, Mitre	27	0806-336	Housing, Axle
5	0204-040	Bearing, Ball (3)	28	0204-039	Bearing, Differential (2)
6	1913-268	Spacer, Transaxle	29	0702-054	Gear, Transmission
7	0702-147	Gear, Mitre	30	0403-003	Differential
8	1904-154	Shaft, Internal Drive (2)	31	1913-034	Spacer, Differential (2)
9	0702-057	Gear, Transmission	32	1606-070	Plug, Drain
10	0215-183	Bushing	33	2301-006	Washer, 3/8" Lock (2)
11	1606-069	Plug	34	0209-318	Bolt, 3/8" x 1" NF Hex (2)
12	1913-283	Spacer, Transmission	35	1401-071	Nut, Full 5/8" SAE
13	0701-103	Gasket, Case	36	2301-096	Washer, Cup 5/8"
14	0304-156	Case, Half Shallow	37	0807-036	Hub Drive Wheel
15	0304-158	Case, Half Deep	38	1902-012	Seal, Axle (4)
16	1913-269	Spacer, Transaxle	39	1207-025	Ring, Lock
17	0702-052	Gear, Transmission	40	1806-001	O-ring, 1/4" x 1"
18	1913-268	Spacer, Transaxle	41	0204-038	Bearing, Axle
19	0702-053	Gear, Transmission	42	1102-013	Key, Woodruff (2)
20	1401-020	Nut, 5/16" C Hex	43	0103-090	Axle, Long
21	2301-004	Washer, Lock 5/16"	44	0103-112	Axle, Short
22	0209-120	HHCS, 5/16" C x 1-1/4"			
23	0701-022	Gasket (2)			

SUNSTRAND BDU-21L-310 & 110 TRANSMISSIONS

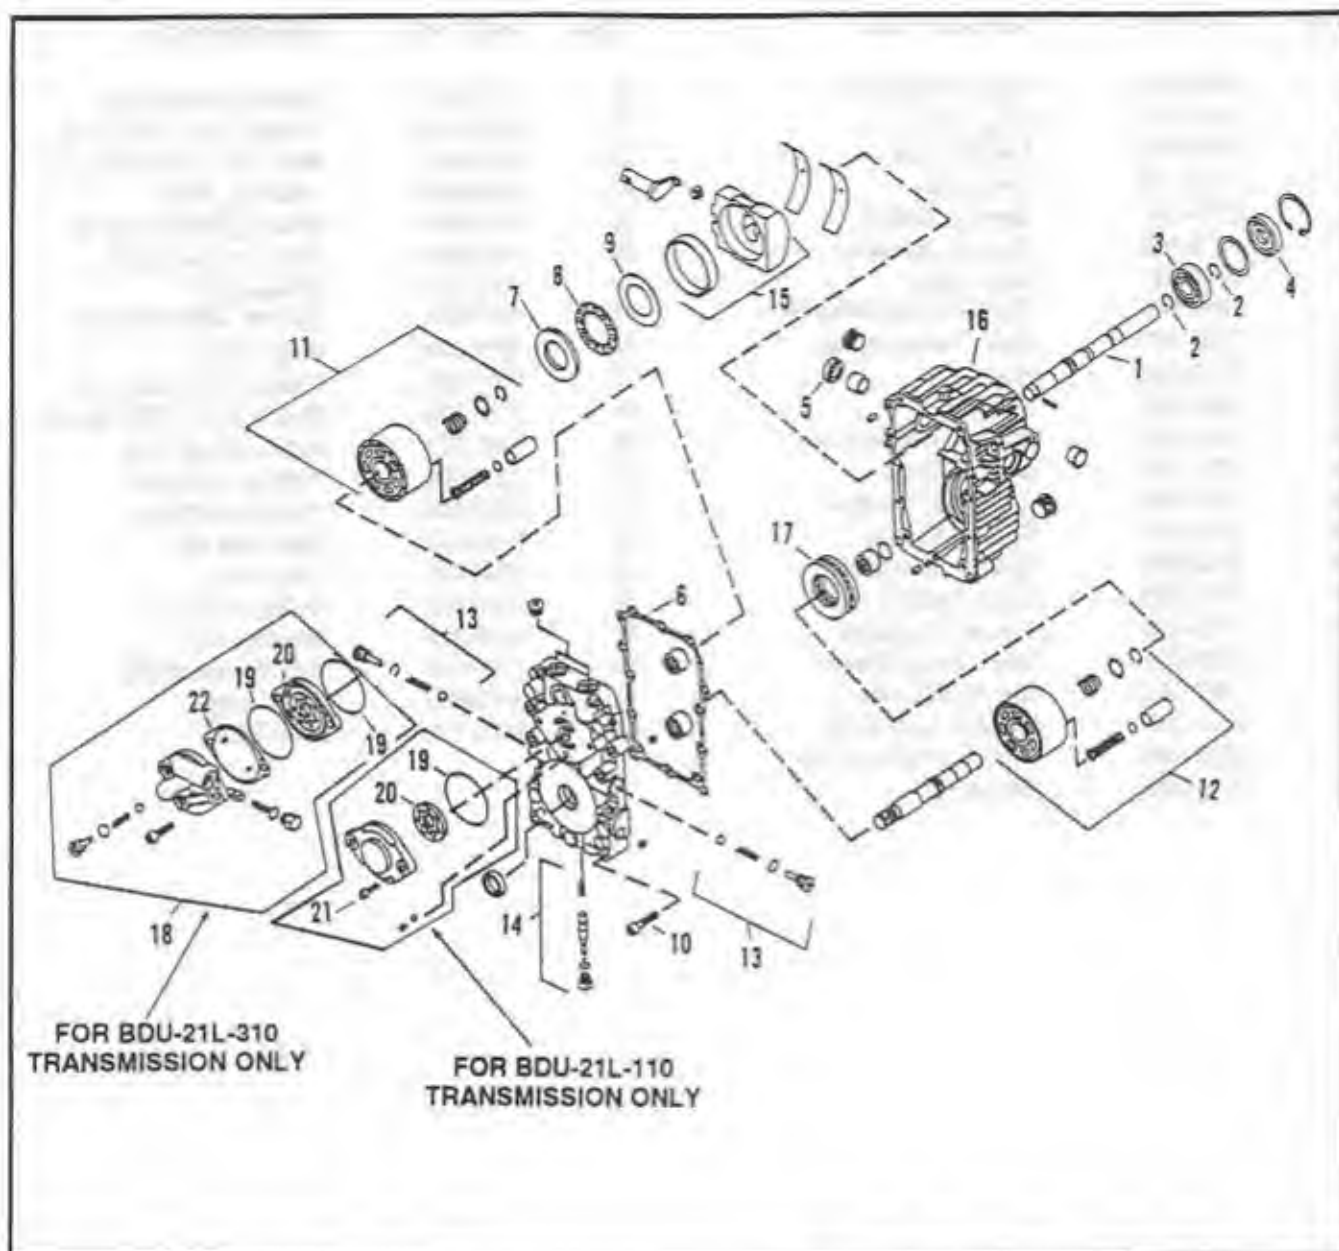


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	1904-296	Shaft	12	1105-139	Kit, Cylinder Block
2	1804-031	Ring, Retaining	13	1105-140	Kit, Check Valve
3	0204-165	Bearing, Ball	14	1105-141	Kit, Bypass Valve
4	1902-078	Seal, Lip	15	1105-142	Kit, Splash Plate
5	1902-077	Seal, Lip	16	1105-143	Kit, Housing
6	0701-104	Gasket, Center Section	17	0204-166	Bearing, Needle
7	1913-303	Plate, Thrust	18	1105-144	Kit, Charge Relief Valve
8	0204-167	Bearing, Roller Thrust	19	1902-079	"O" Ring
9	1913-304	Plate, Thrust	20	1810-010	Assembly, Gerotor
10	1901-236	Screw	21	1901-237	Screw
11	1105-138	Kit, Cylinder Block	22	1907-066	Shim, Charge Pump

ELECTRICAL SYSTEM

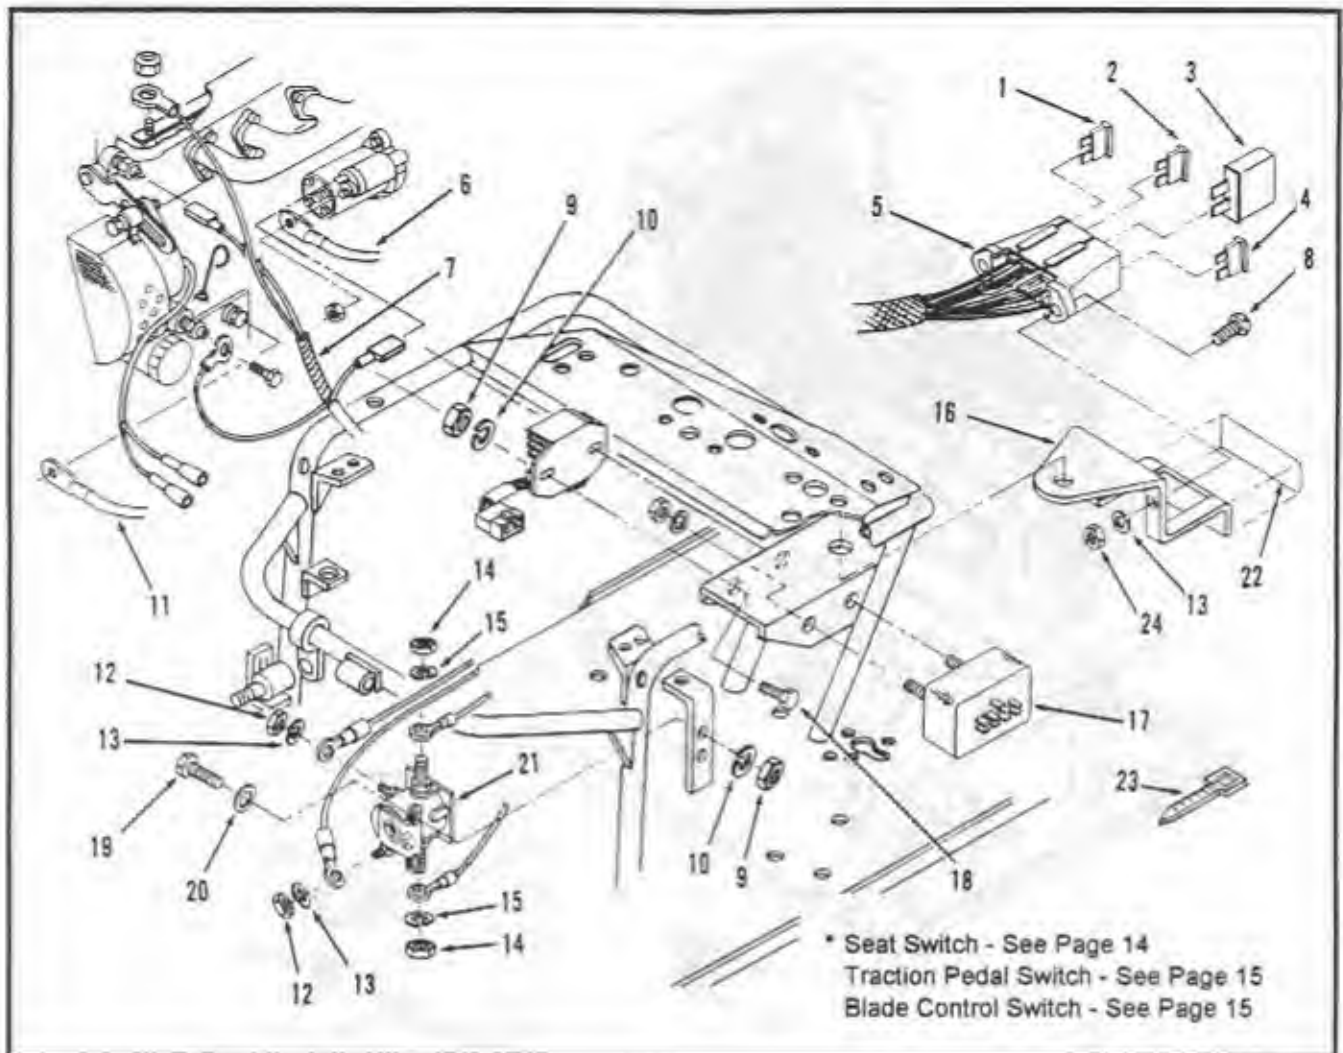

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0222-011	Fuse, 3A	13	2301-001	Washer, 3/16 Lock (4)
2	0222-010	Fuse, 7.5A	14	1401-020	Nut, 5/16C Hex (2)
3	0222-008	Breaker, 10A	15	2301-004	Washer, 5/16 Lock (2)
4	0222-009	Fuse, 30A	16	0214-520	Mt, Fuse Block
5	0811-053	Harness, Console	17	1923-052	Module
6	0301-156	Cable, Positive	18	0209-049	HHCS, 1/4Cx1G5 (2)
7	0811-052	Harness, Eng.	19	0209-021	HHCS, 1/4C x3/4G5 (2)
8	1901-177	RHMS, 10Cx3/4 (2)	20	2301-020	Washer, 1/4 Flat (2)
9	1401-010	Nut, 1/4C Hex (2)	21	1923-045	Solenoid, Starter
10	2301-003	Washer, 1/4 Lock (2)	22	0401-402	Decal, Fuse
11	0301-157	Cable, Negative	23	2014-001	Tie, Strap (7)
12	1401-060	Nut, 10F Hex (2)	24	1401-001	Nut, 10C Hex

OIL DRAIN SYSTEMS

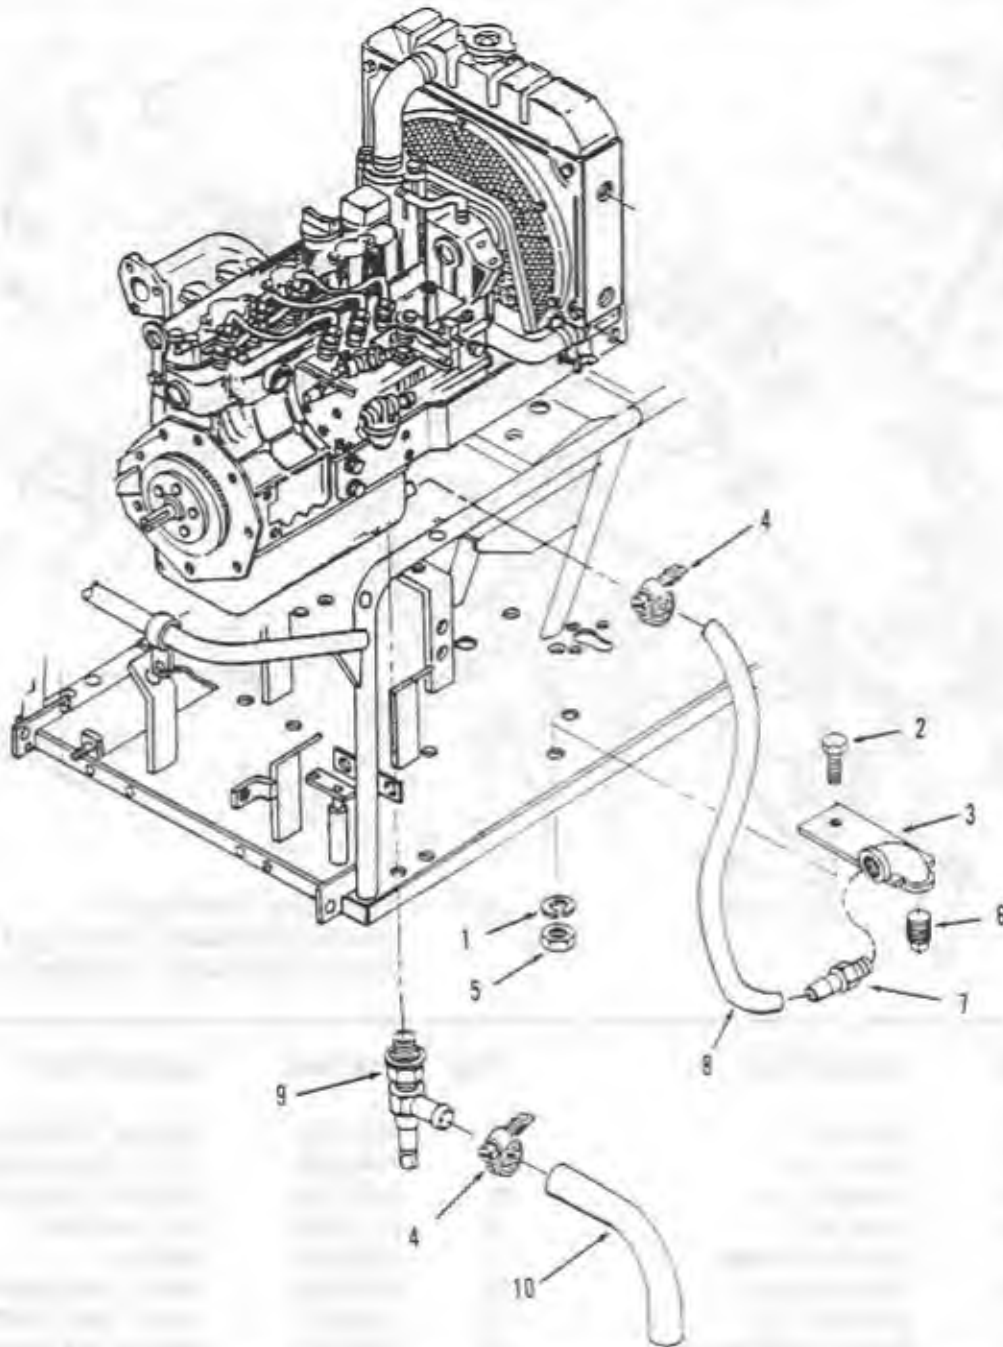

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	2301-004	Washer, 5/16 Lock	6	1606-038	Plug, 3/8 Sq.
2	0209-114	HHCS, 5/16Cx1G5	7	0101-166	Adapter, Hose
3	0501-020	Elbow, Drain Asm.	8	0812-102	Hose, Rubber 6NP-8PL
4	0307-046	Clamp, Hose .5-.87Wo	9	2201-041	Valve, Oil Drain
5	1401-020	Nut, 5/16C Hex	10	0812-084	Hose, Oil Drain